



FOTILE
A BREATH OF FRESH ENGINEERING™

3-IN-1 IN-SINK DISHWASHER

SD2F-P1X/SD2F-P1XL

Use and Care Manual P2-P17

LAVAVAJILLAS DE LAVAPLATOS 3 EN 1

SD2F-P1X/SD2F-P1XL

Uso y Cuidado P02-P19

创新三合一 水槽洗碗机

SD2F-P1X/SD2F-P1XL

使用与保养说明 P2-P15

THANK YOU FOR MAKING FOTILE A PART OF YOUR HOME

Dear Customer,

Thank you for choosing the FOTILE SD2F-P1X 3-N-1 In-Sink Dishwasher manufactured by FOTILE. Please read the User Manual carefully before using your new Sink Dishwasher. Please also retain this manual for further reference.

If you have any questions during your initial use, please call the FOTILE Service hotline at 1-888-315-0366.

FOTILE
Happiness Starts In Your Kitchen!

Table of Contents

Safety Instructions	4
Main Technical Specifications	8
Operation Guidance	11
Tableware Placement	16
Washable Tableware/Material	18
Daily Cleaning	18
Maintenance Recommendations	19
Troubleshooting	21
Customer Service	21
Exploded View	24

Safety Instructions

To avoid injury and property damage to users and others, we have categorized the safety instructions and assigned symbols as shown in the table below.




Please review all the instructions carefully, and strictly observe each one of them. Failure to do so can result in personal injury or product damage.

This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.

Please keep children away from an unattended appliance.

If the Power Cord becomes damaged, it must be replaced by the manufacturer. Please call FOTILE Customer Service to schedule a Service Visit.

Categories by Degree of Damage or Injury

 DANGER	Ignoring this symbol and operating incorrectly can cause danger, serious injuries or fire.
 WARNING	Ignoring this symbol and operating incorrectly can cause danger, serious injuries or fire.
 CAUTION	Ignoring this symbol and operating incorrectly can cause injuries or property damage.











Icons for Caution and Prohibition






 Risk of Scalds	 Risk of Electric Shock	 Mandatory Action	 Grounding	 No	 No Open Flames	 No Touching	 Do not Operate with Wet Hands	 Do not Disassemble
--	--	--	---	--	--	--	---	--












 **CAUTION:** The tempered glass on FOTILE product has a minimal probability of spontaneous glass breakage due to its reinforcing mechanism. For spontaneous glass breakage not caused by improper usage, our company promises to change this accessory free of charge.


















If there are any conflicts between terms in this operation manual and national laws and regulations, the national laws and regulations shall govern.

* **Special notes:** Please use this product by strictly following the instructions in this operation manual. The company is not responsible for any property damage or bodily injuries caused by improper usage of this product.

 DANGER	
 No Do not get the power cord, or any electric parts wet as this may cause electric shock or other accidental damages.	 No Do not modify, stretch, knot or place heavy objects on the power cord. Doing so may cause damage to the power cord and result in electric shock, fire, and personal / property damage.
 No Do not leave children unattended when using this product as this could cause electric shock or other accidental damages.	 Do not Operate with Wet Hands Do not touch the power plug, connector or electrical parts with wet hands, this may cause electric shock.
 Risk of Electric Shock Before installation and repair, please disconnect the power cord to avoid electric shock.	 No Do not use flammable solvents such as alcohol to clean the sink..
 Mandatory Action When moving the unit, please pay attention to the edges and corners of the sink to avoid scratches or injury.	 Risk of Scalds During operation of this product, do not forcibly open the door, as you can be scalded by hot water and cause personal injury.
 Grounding The electrical socket used with this appliance, must have reliable grounding to ensure safety. The grounding wire shall not be connected to a gas pipe, water pipe, lightning rod, or telephone line. Poor grounding may cause electric shock, personal injury, or property damage.	

 WARNING	
 No Do not use power sockets with loose or poor contact, this may cause electric shock, short circuit and or fire. Ensure secure connection of the power cord, or it may cause electric shock.	 Mandatory Action To avoid personal injury, property damage or product damage, this product is not intended for use by children, people with reduced mobility, or reduced sensory judgement unless supervised by a responsible individual.
 No Do not forcibly close the functional sink door when it is automatically opened; otherwise the door may be damaged.	 No Do not fill hot water into the inlet pipe directly, or it may affect the normal use of the product.

 WARNING	
 Risk of Scalds Do not touch heating units when in use, as it may cause scalds.	 Mandatory Action If water leaks during operation, please stop using and contact FOTILE after-sales service center immediately at 1-888-315-0366.
 Do not Disassemble Disassembly of the product for repair or changing parts should only be performed by a certified FOTILE Service Technician.	 No In the process of washing dishes and produce in the functional sink (dishwasher cavity), use light liquid dish soap for tableware only, and do not use any foaming detergents.
 Mandatory Action If the ultrasound operation causes any discomfort, please stop using it and contact the manufacturer.	 Mandatory Action Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.
 Mandatory Action When you open the door after operation, hot steam may escape. Please stand away from the door to avoid scalds.	 Mandatory Action Keep the plastic film and packing cases away from children to avoid suffocation accidents.
 Mandatory Action Please use new hoses to connect appliances to the water source. Do not reuse old hoses.	 Mandatory Action For any operational errors, please stop using the product, unplug the power cord from the electrical outlet, and take the appropriate actions according to the "Troubleshooting" section in the User Manual. If the problem still persists, please call FOTILE Customer Service at 1-888-315-0366.


 Caution	
 Mandatory Action Do not put objects with a lot of silt into the dishwasher, or it may disturb the normal operation of the product.	 No Do not put jewelry, gold and other valuables into the sink for cleaning to avoid causing damage to the product and cleaned articles.
 No Do not clean the glass with coarse cleaning agents, a metal pot scourer, a scouring pad with a rough surface, or sharp metal scrapers. These materials may scratch the glass surface and cause damage.	 Mandatory Action The countertop the sink dishwasher will be installed into must have sufficient strength and height to support the product, and the dishwasher must be firmly installed in the countertop
 Mandatory Action The product may get hot during use. Please do not touch the heating elements of the product and their surrounding areas.	 Mandatory Action In case the power cord is damaged, it must be replaced by a professional from the manufacturer's service department or similar department to avoid danger.
 No Do not put heavy objects on the glass door of the product.	 No Do not press the Start/Pause key frequently.
 No Do not clean meat in the functional sink.	 No Do not use multi-functional sockets with many plugs.
 No Do not forcibly open the cover of the Secondary Sink door during power outage.	 Mandatory Action Keep the complete machine away from heat sources and flammable materials such as gas and alcohol.
 No During the operation of the product, do not pour water directly into the Secondary Sink, or it may cause abnormal operation of the product.	 Mandatory Action After each cleaning, please clean out food debris in the debris basket before using it again in time.
 No Do not use elongated materials such as chopsticks to poke the door lock hole, or the machine will not function properly.	 Mandatory Action Please ensure the sewer pipe is not blocked. Blockage may cause abnormal operation of the product.

Notice: This product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. For more information, please go to: www.P65Warnings.ca.gov

Main Technical Specifications


		3-In-1 In-Sink Dishwasher					
Model		SD2F-P1X/SD2F-P1XL (Sink on left hand side)					
Overall Dimensions	L x W x H	39" x 19 5/16" x 22"					
	Height of Fully Opened Door (inch)	16 3/8"					
Counter Cutout Size	L x W x H	38" x 18 1/8" x ≥25"					
Basic Parameters	Power	2150W					
	Current	9A					
	Voltage	240V					
	Frequency	60Hz					
	Length of Power Cord	4ft					
	Water Pressure	20.3 psi -145.04 psi					
	Max Noise Level	58.2dB					
	Gross Weight	68.5lbs					
	Net Weight	48.5lbs					
	Power Consumption	160 kWh/year					
Included Accessories	1 Dish Washing Basket						
	1 produce washing basket						
Function/Performance	Rinse Mode	For Dishes			For Produce		
		Delicate	Normal	Intensive	Delicate	Normal	Intensive
	Highest Washing Temperature	122°F	158°F	158°F	Room Temperature		
	Washing Time	20minutes	45minutes	80minutes	8minutes	13minutes	18minutes
	Total Water Consumption (gallon)	1.85	2.40	3.17	Low Water Level: 2.91	Low Water Level: 3.43	Low Water Level: 3.96
					Medium Water Level: 3.96	Medium Water Level: 4.49	Medium Water Level: 5.02
					High Water Level: 5.02	High Water Level: 5.55	High Water Level: 6.08
	Number of Water Cycle in the Full Process	3	5	5	1	2	3
	Maximum Washable Dinnerware Diameter	10inches			/		
	Variable Dish Rack	Yes			/		
	3D Fan Drying	Yes			/		
	Hidden Heating Plate	Yes			/		
	Inlet Level	/			3		
	Standard Capacity	3			/		
Material of Cavity	Food-grade Stainless Steel						
Operation Mode	Micro-pressure Waterproof Touchscreen						
Digital Display Screen	Yes						
Automatic Reminder	Yes - When Cleaning Completed						
Water Leakage Protection	Yes						
Child Lock	Yes						



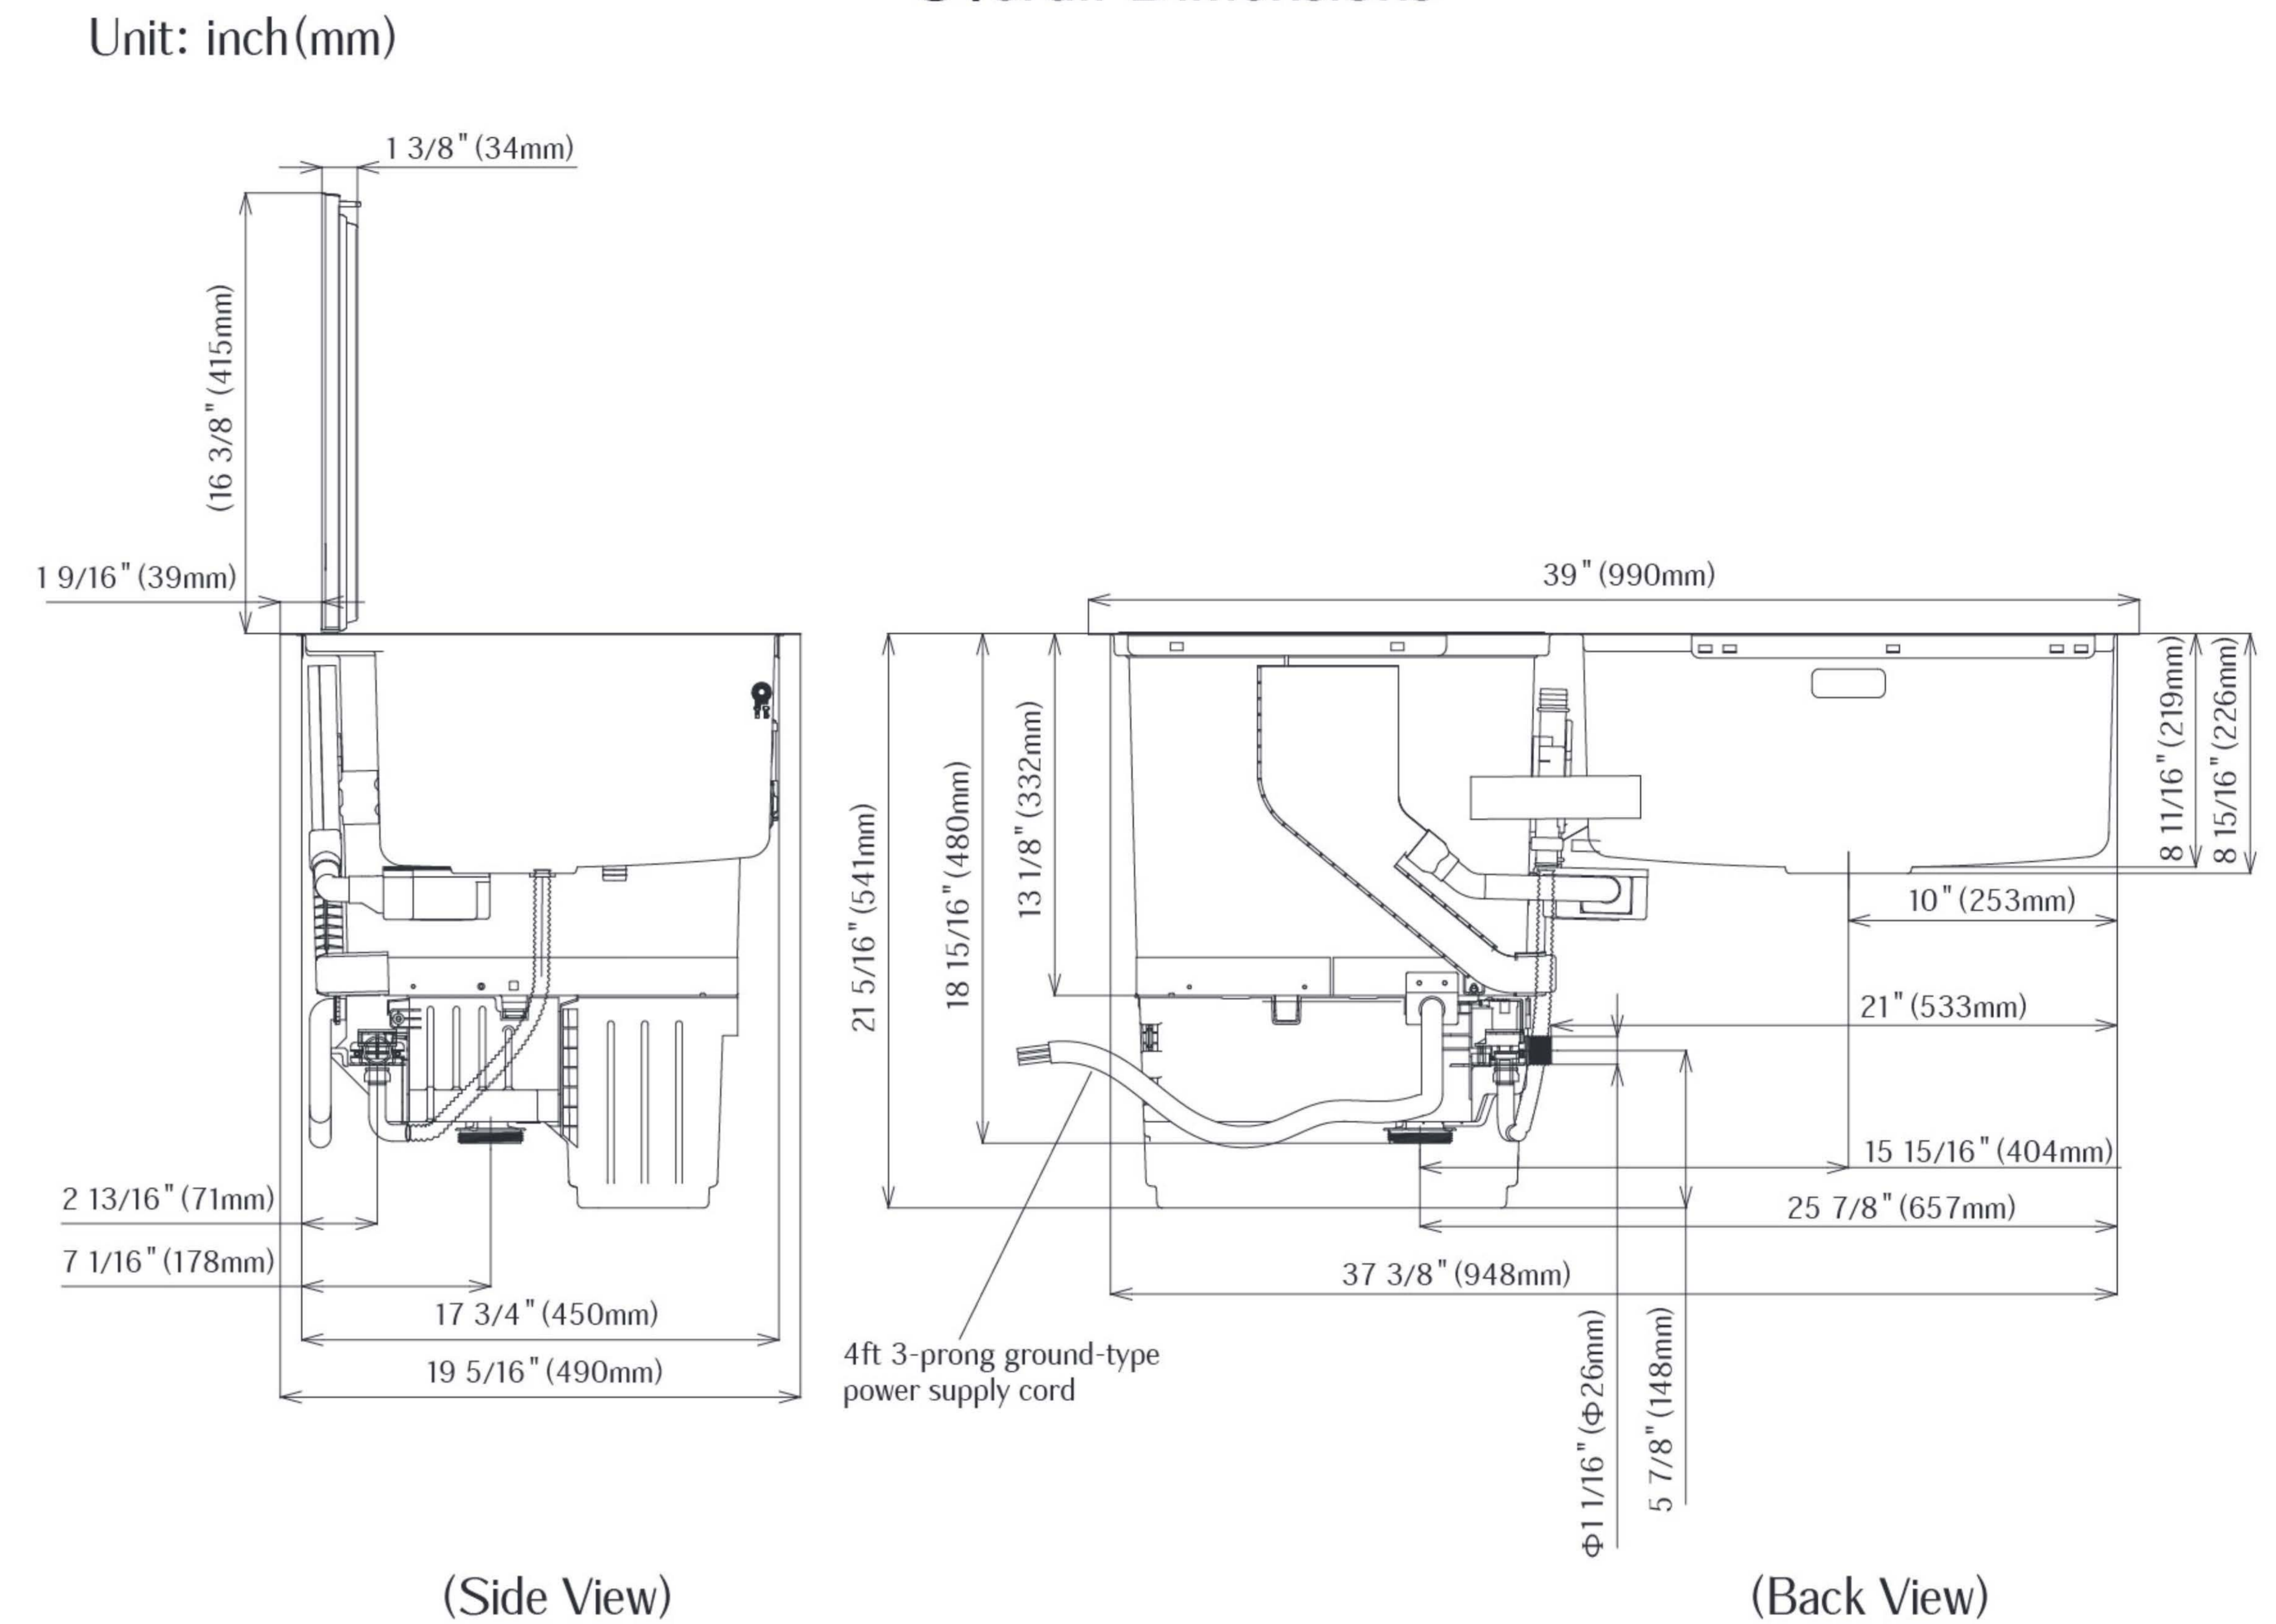



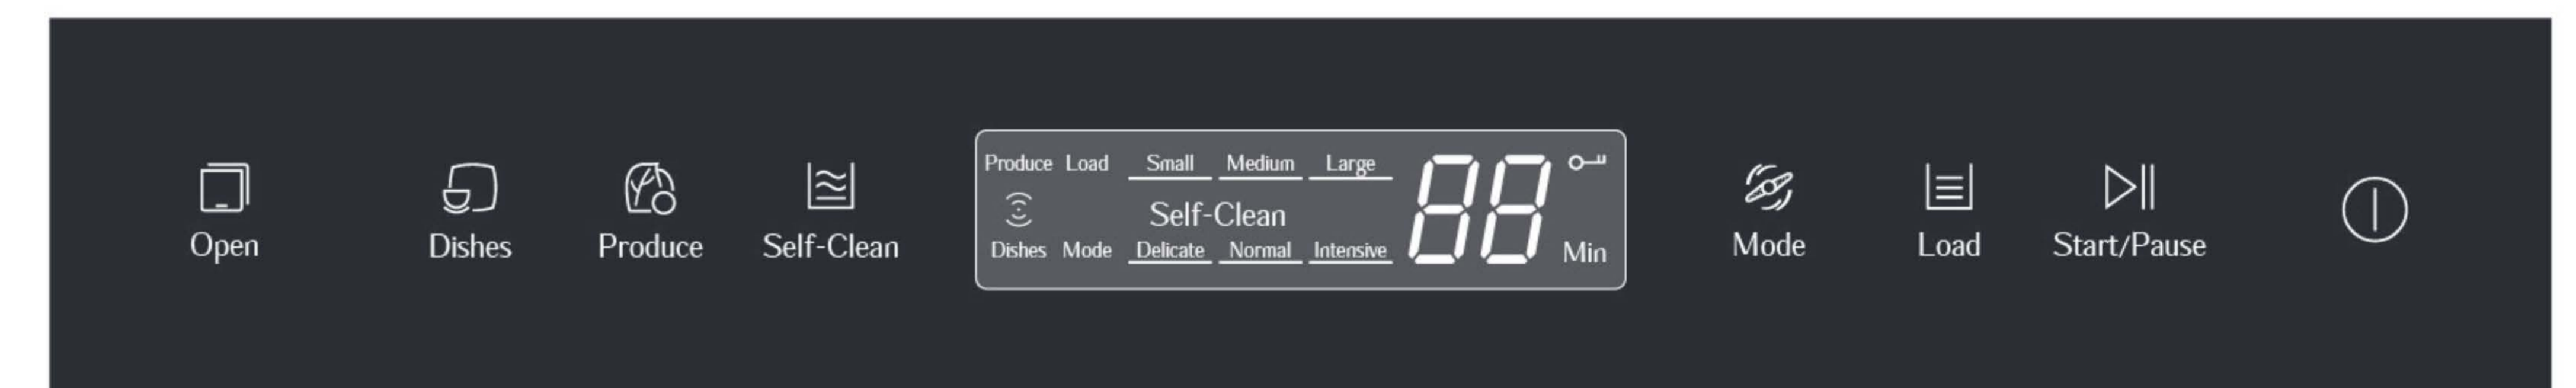

Overall Dimensions



Operation Guidance

I. Operation Interface




1. Open key : Press the key to open the door in the non-working state; and press the Start/Pause key and then the Door key to open the door in the working state.
2. Dishes key : Press it to perform the Dishes Washing Program.
3. Produce key : Press it to perform the Produce Washing Program.
4. Self-clean key : Press the key to initiate the cavity cleaning procedure.
5. Display screen: It mainly displays information about the washing time, mode, water level and ultrasound.
6. Mode key : Select delicate, normal or intensive washing for both the dishwasher, and produce washing programs.
7. Water Level key : Select high, medium or low water levels for the Produce Washing Program.
8. Start/Pause key : Controls the start and pause functions of the product.
9. Power key : Controls power on and off.

II. Operation Instructions

■ Dish Washing Program

Place the dishes washing basket in the Dishwasher Chamber. Load all your dishes and tableware. Press and hold the Power key, and the number flashes → Press the Open key → Put in bowls and dishes → Select Dishes → Select mode (optional) → Press the Start/Pause key to start washing → Wash and dry the dishes → End of washing → Turn off the machine.

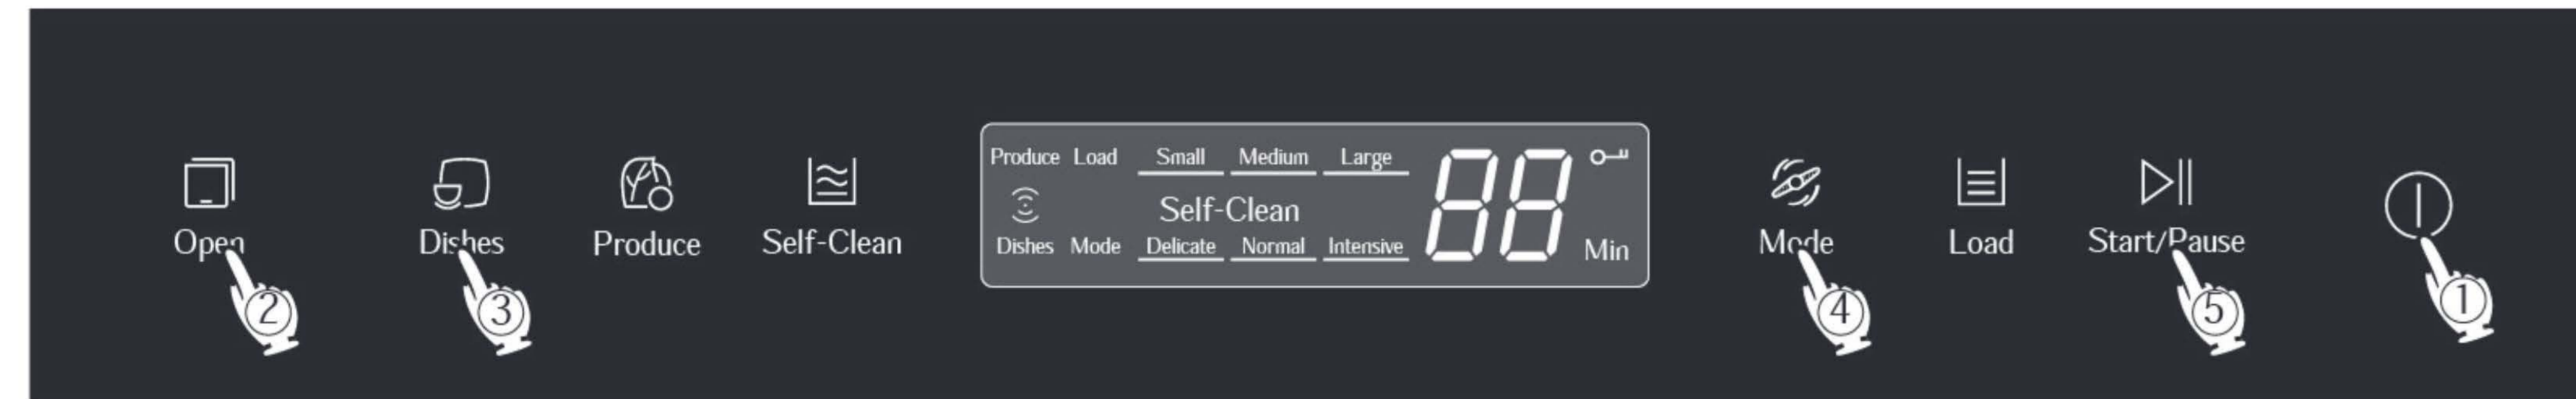

- Notes:
1. Bowls and dishes should be placed into the rack for cleaning.
 2. Upon completion of washing, the screen displays 00. For emergency quick use of bowls and dishes, please press the Power Key and then press and hold the Open Key. Otherwise, the system enters the dishes drying state and then shuts down automatically after 30 minutes.

Washing Mode	Delicate	Normal	Intensive
Washable Dinnerware	Slightly dirty tableware	Generally dirty tableware	Heavily dirty tableware
Maximum Washing Temperature (°F)	122°F	158°F	158°F
Washing Time (minutes)	20 minutes	45 minutes	80 minutes
Total Water Consumption (gallon)	1.85 gallons	2.40 gallons	3.17 gallons
Recommended Amount of Detergent	5g/0.18oz	15g/0.53oz	15g/0.53oz

- Notes:
1. To have a better cleaning effect, add your dishwasher detergent before the placement of your tableware. If you are using dishwashing powder, place it at the bottom of the tank. If you are using a dishwasher pod, place it in the debris basket.
 2. It's suggested that you pre-rinse your tableware to avoid any food debris that may interfere with the rotating spray arm which could affect the normal operation of the dishwasher.

■ Produce Washing Program

Please remove the dishes washing basket from the dishwasher chamber, and place the produce washing basket in the dishwasher chamber. Press and hold the Power key, and the number flashes → Press the Open key → Put in fruits and vegetables → Select Produce → Select mode (optional) → Select level (optional) → Press the Start/Pause key to start washing → End of washing → Turn off the machine.




- Optional:
1. Select mode: Press the Mode key to select one of these options for the type of washing you want: delicate washing, normal washing or intensive washing.
 2. Select level: Press the Level key to select one of these options for water levels: high, medium or low.

	Water Level	Delicate	Normal	Intensive
Washing Time	There is a water level scale on the inside wall of the basket. It is suggested that you should choose the nearest water level for cleaning, based on the amount of produce you have in the basket. One Drop: Low Water Level Mark Two Drops: Medium Water Level Mark Three Drops: High Water Level Mark	8minutes	13 minutes Delicate or Normal or Intensive Mode	18 minutes
Washable Produce		<ul style="list-style-type: none"> Some fruits such as cherries, strawberries, raspberries/ blackberries are prone to be mashed during washing 	<ul style="list-style-type: none"> Fruits and vegetables such as apples, pears, oranges, grapes, peaches, cucumbers, green vegetables and tomatoes 	<ul style="list-style-type: none"> Fruits and vegetables with very dirty surface, such as sweet potatoes, potatoes and peanuts Fruits and vegetables with waxed surface or seriously eroded by pesticides
Washing Temperature		Indoor Temperature	Indoor Temperature	Indoor Temperature

- Notes:
1. Fruits and vegetables should be placed into the produce washing basket and then in the dishwasher chamber for cleaning.
 2. For fruits and vegetables that have excessive surface dirt on them, they should be rinsed off in the sink prior to be put into the produce washing basket.
 3. Do not use the produce washing basket to clean bowls, dishes and other tableware as they will not be secured in place, and could move around during washing which can lead to damage.
 4. Clean the cavity, debris basket and screen before cleaning fruits and vegetables.

■ Self-Cleaning


Press and hold the Power key, and the number flashes → Press the Open key → Select Self-clean key → Press the Start/Pause key → to start washing and drying → End of washing → Turn off the machine.

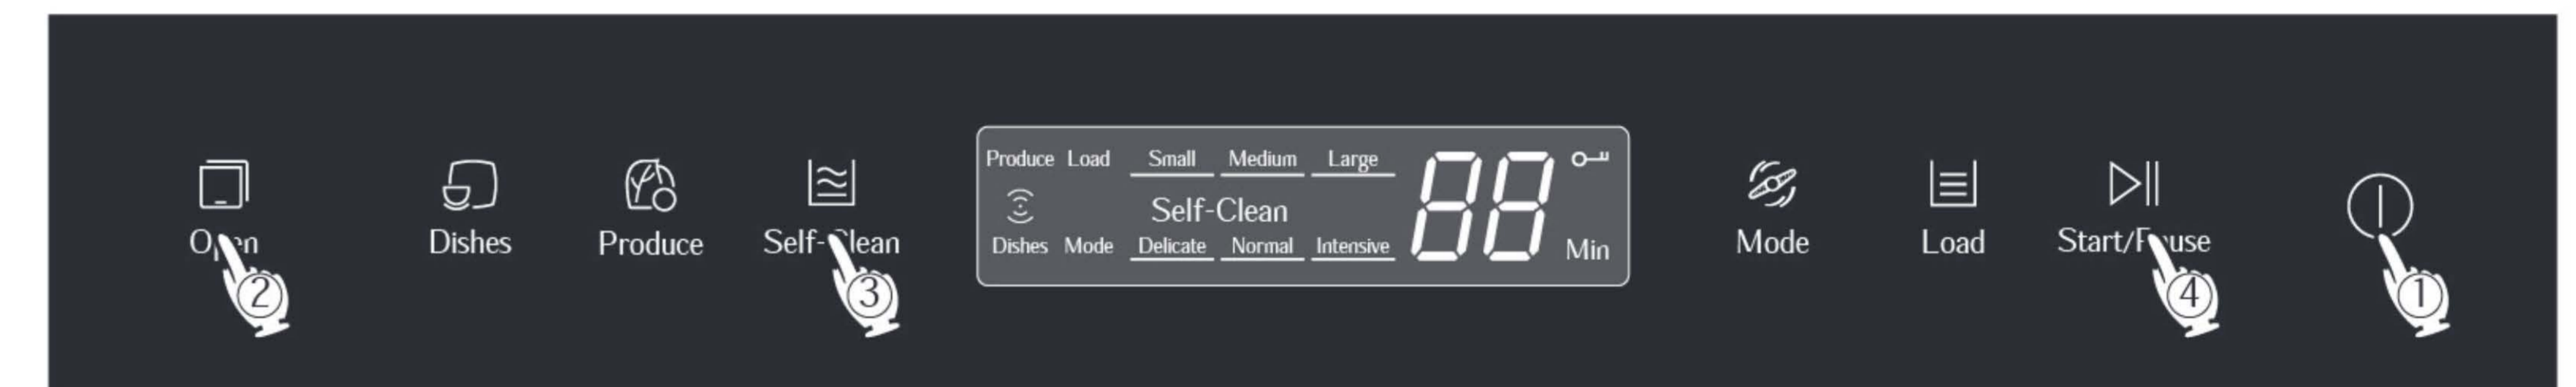




- Notes:
1. Upon completion of the washing, 00 is displayed on the screen. For emergency use of the dishwasher, please press the Power key, and then press and hold the Open key. Otherwise, the system shall enter the drying state and will shut down automatically after 30 minutes.
 2. For an even better cleaning effect, add a descaling agent during self-cleaning.

◆ Usage of Secondary Sink Cover Accessory


- * If you purchase the Secondary sink cover accessory, you can use the dishwasher portion as a second sink. In order to use the Secondary Sink Cover accessory, take out the dishwasher basket from the dishwasher, and replace it with the Secondary Sink Cover covering the rotary spray arm.
- Water inflow: press and hold the strength key for 2 seconds, when you hear a "click" sound, the drainage valve shall close, and the sink will start to fill with water.
 - Water drainage: press and hold the Level key for 2 seconds, when you hear a "click" sound, the drainage valve shall open, draining out the water. The drainage valve shall close automatically when its open time has exceeded 30 minutes.

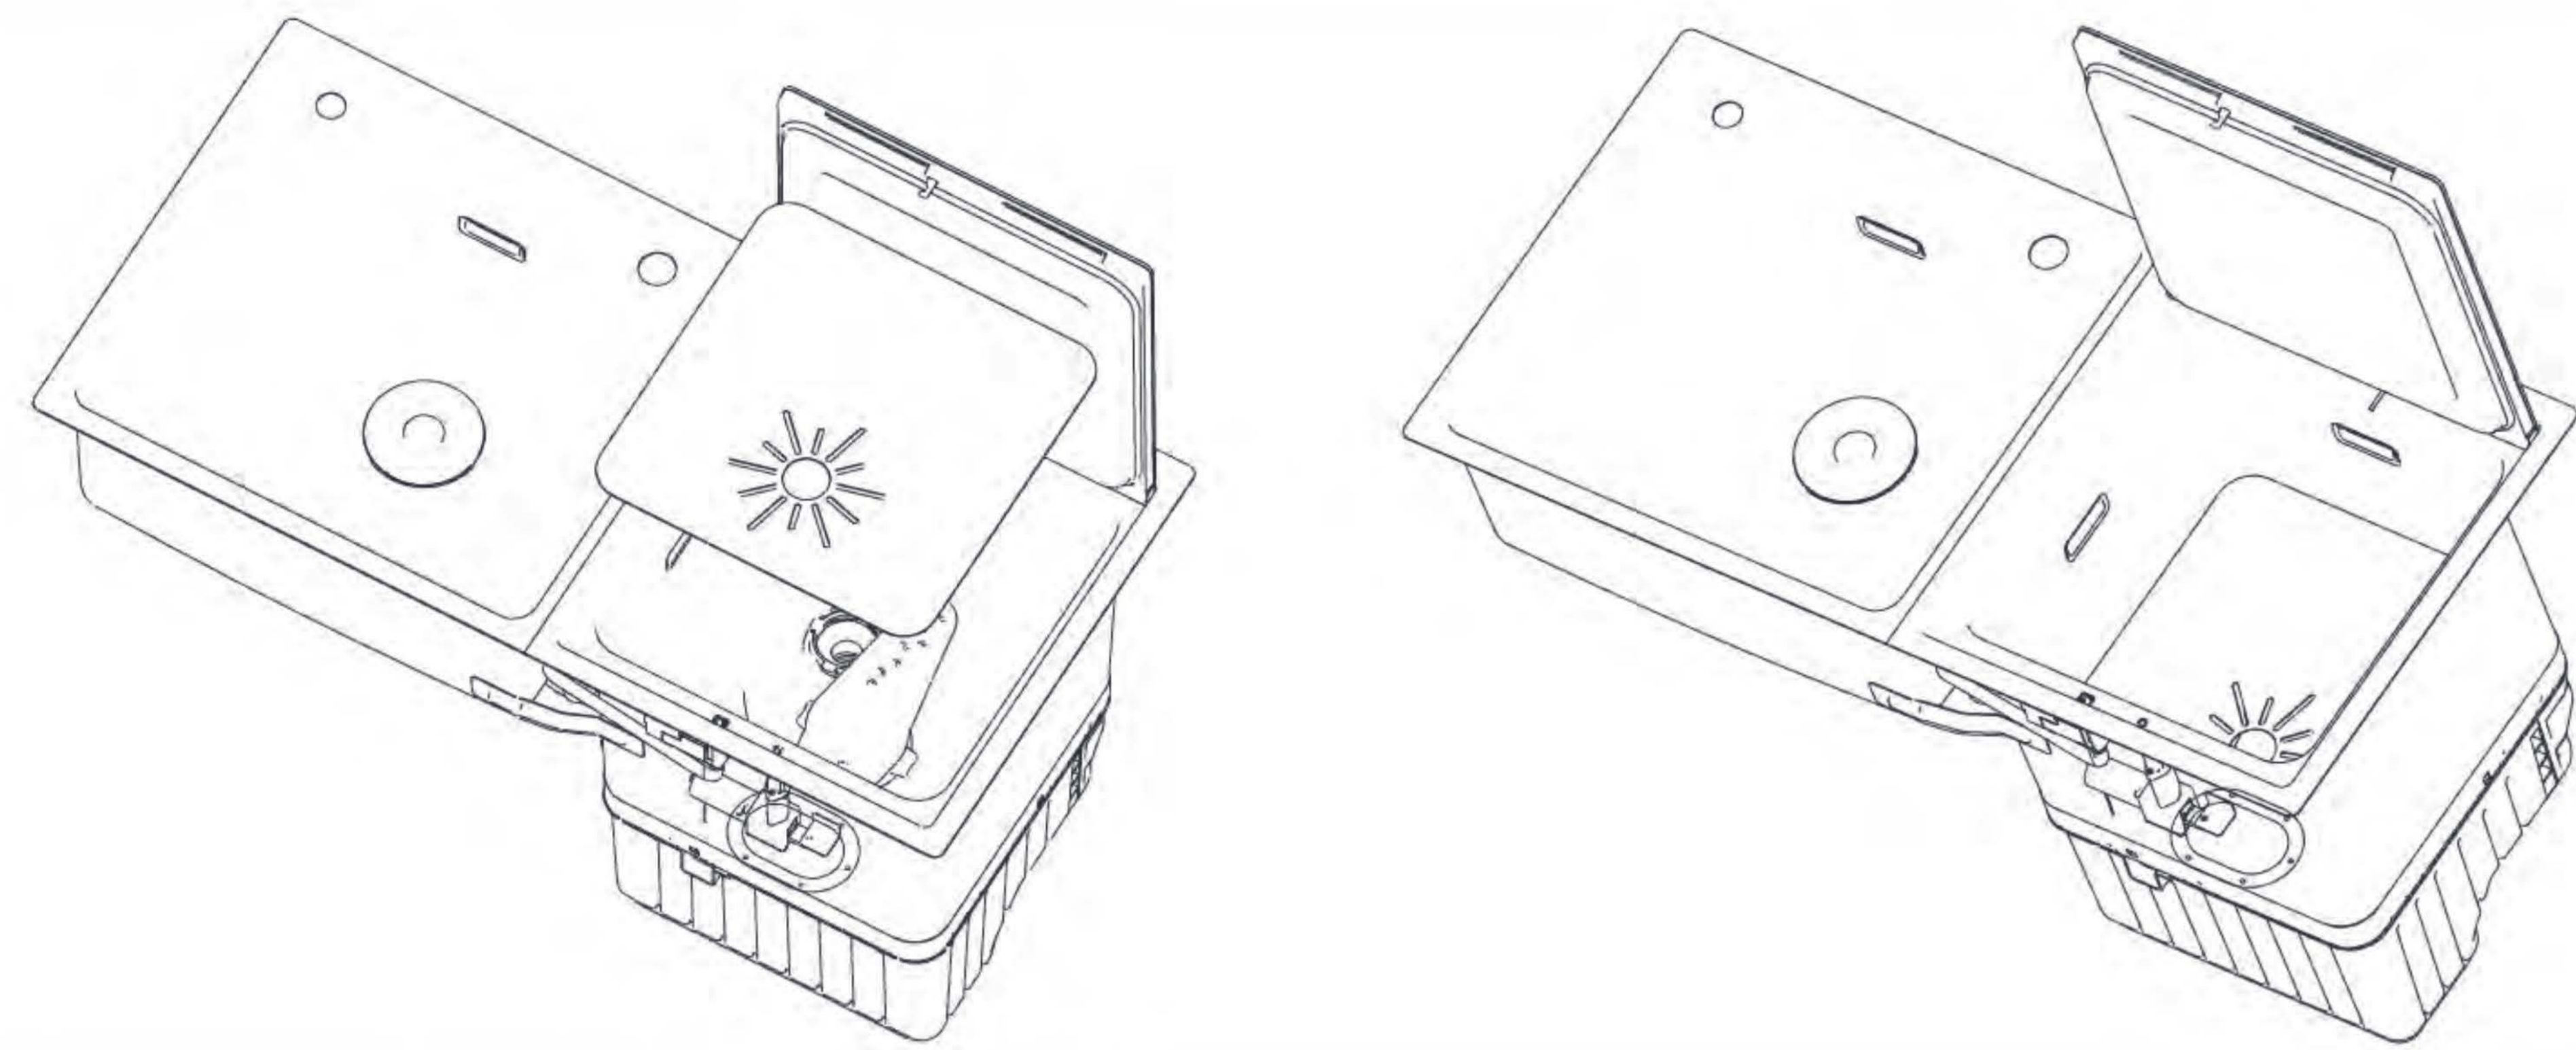

Tableware Placement

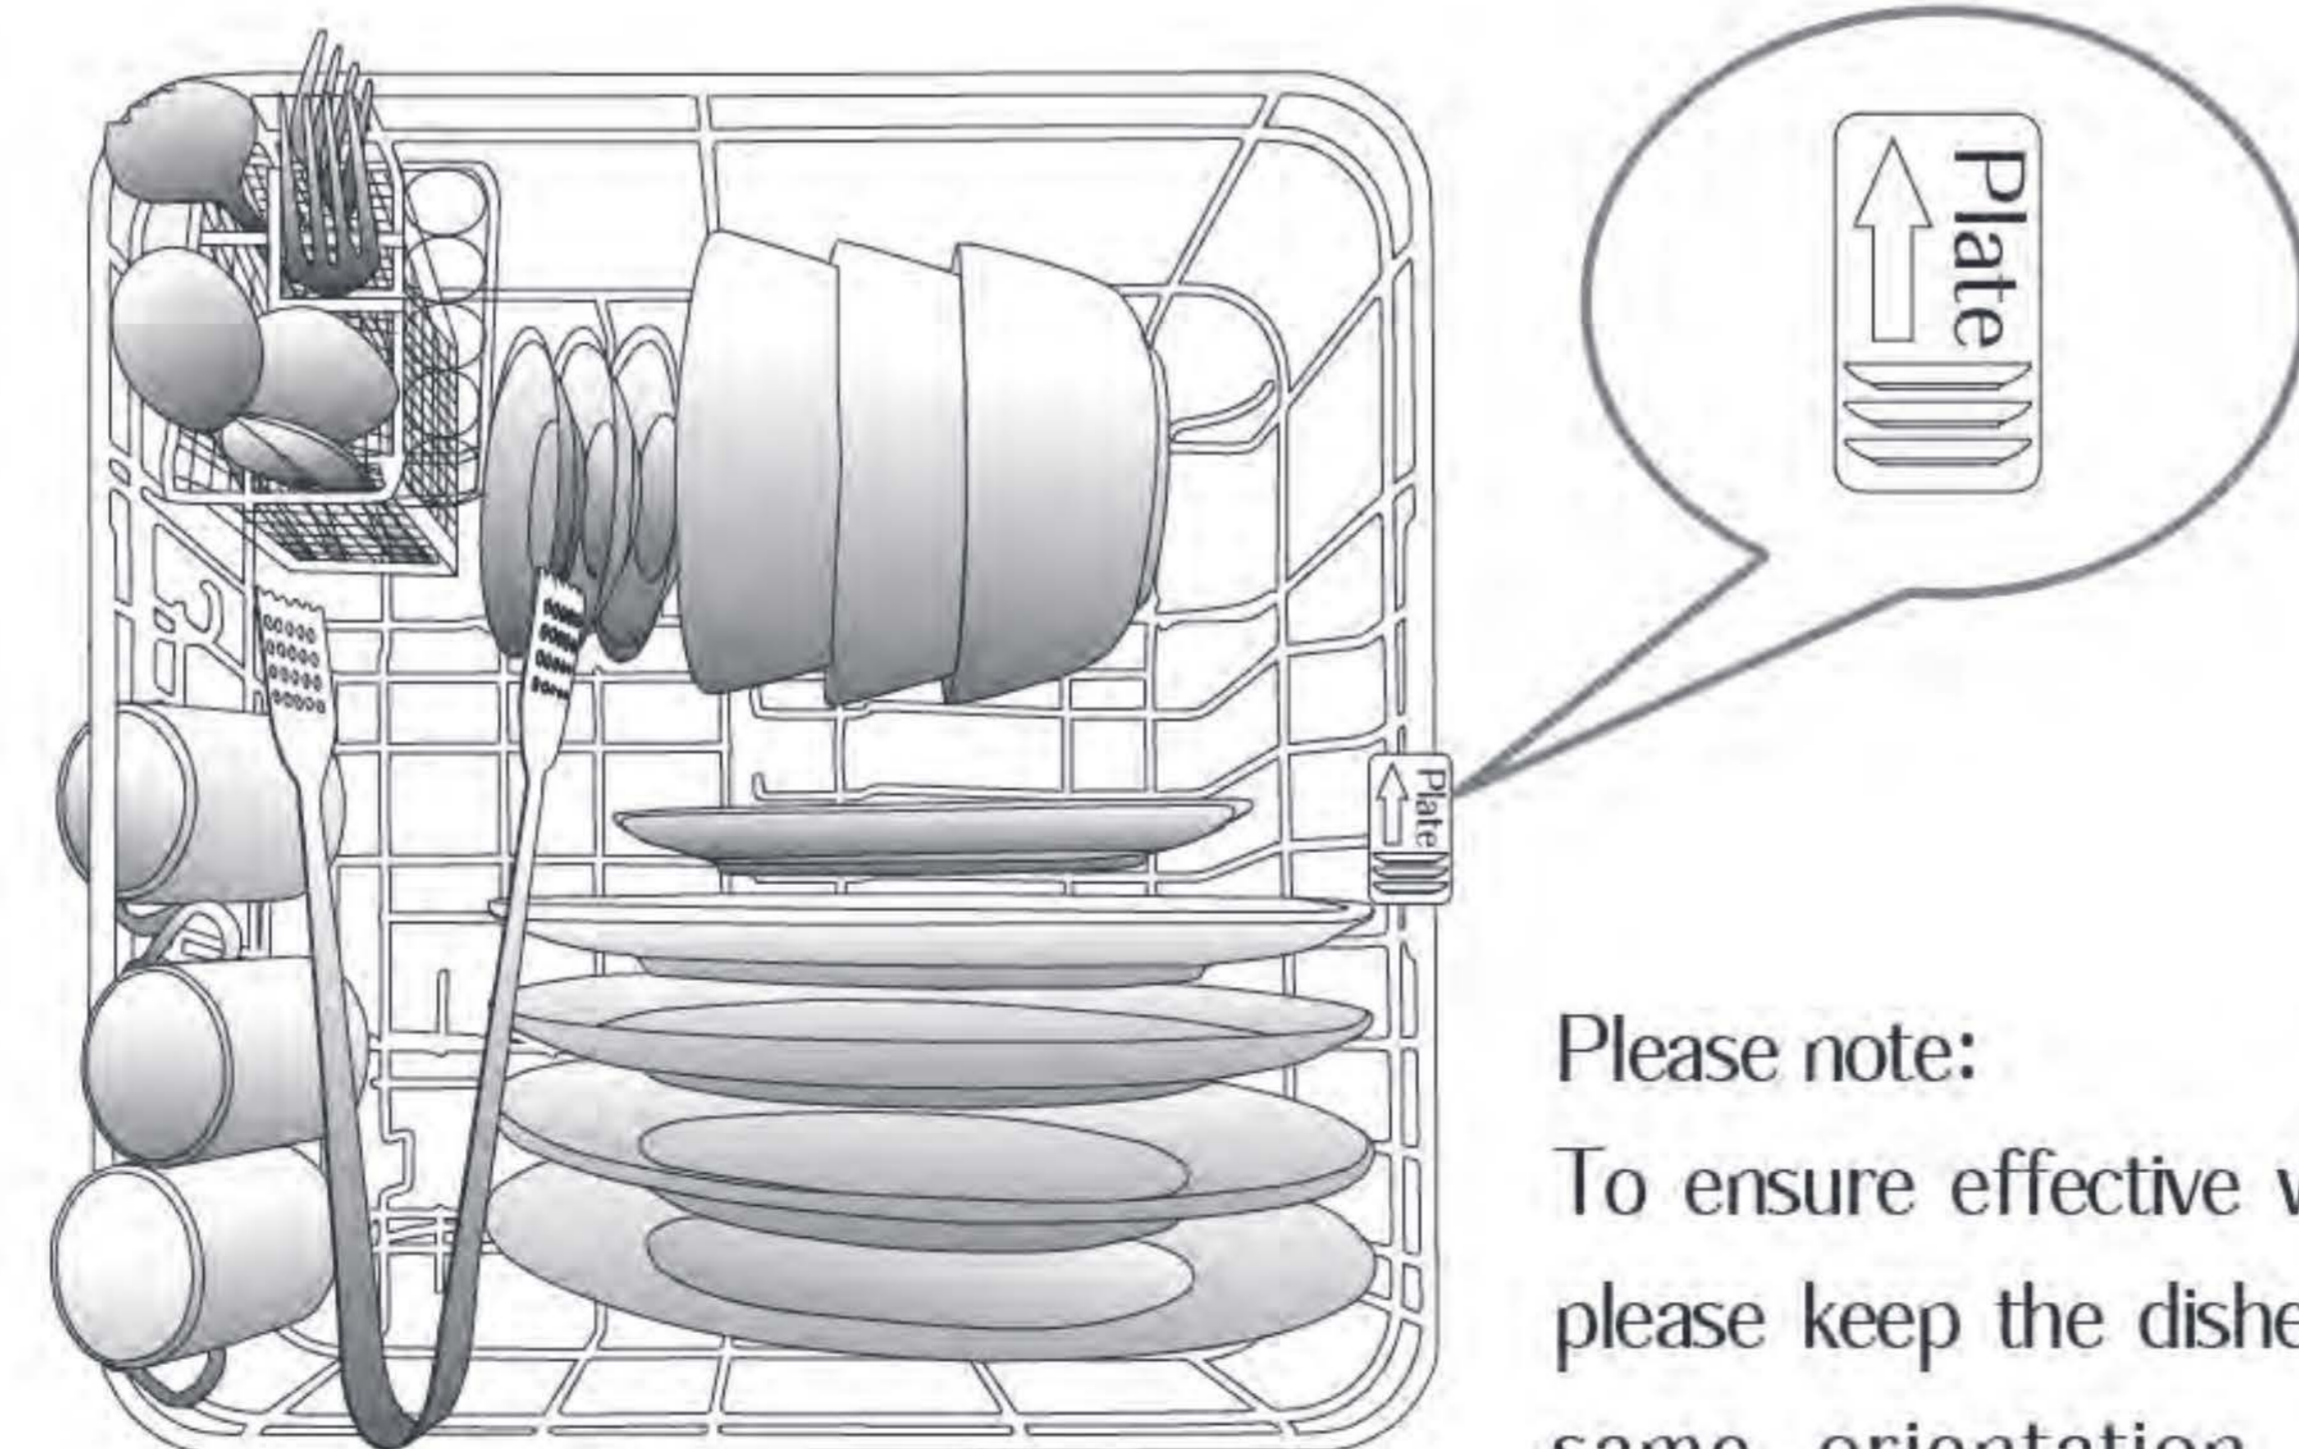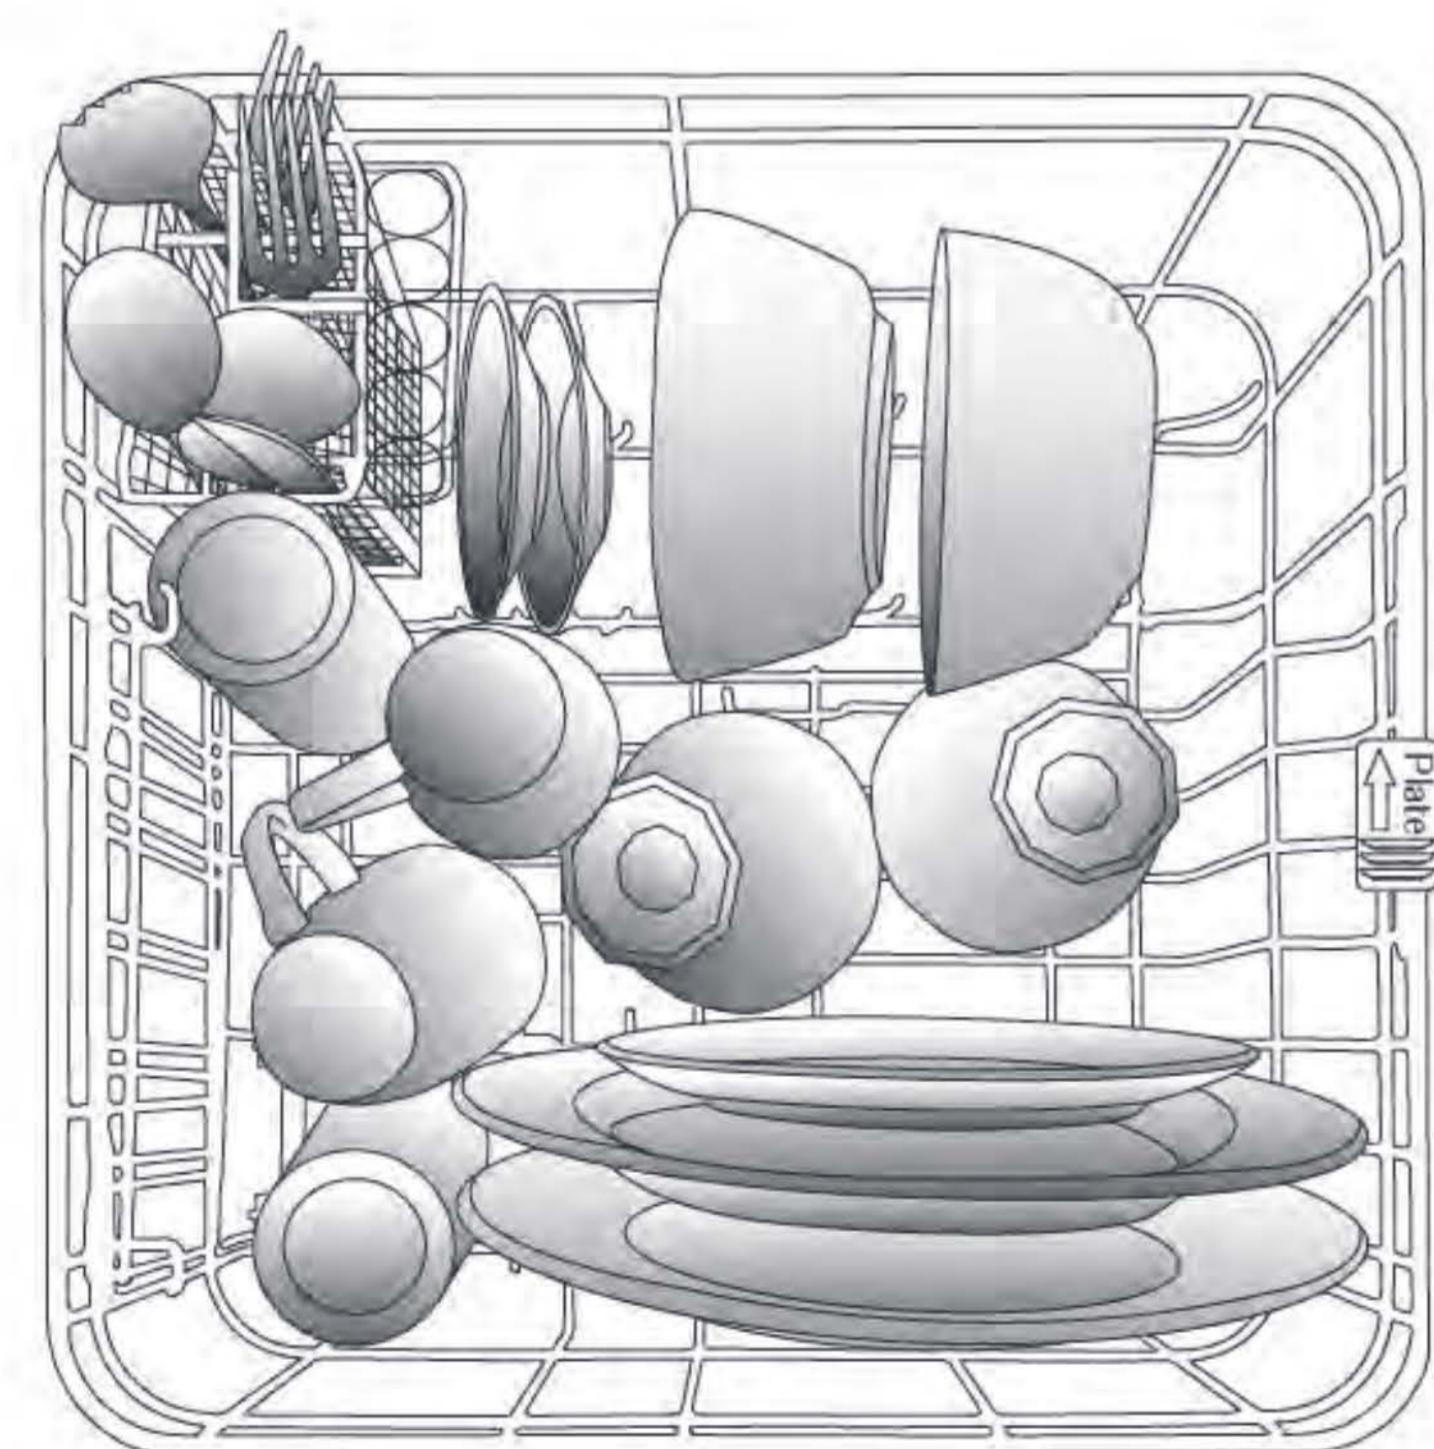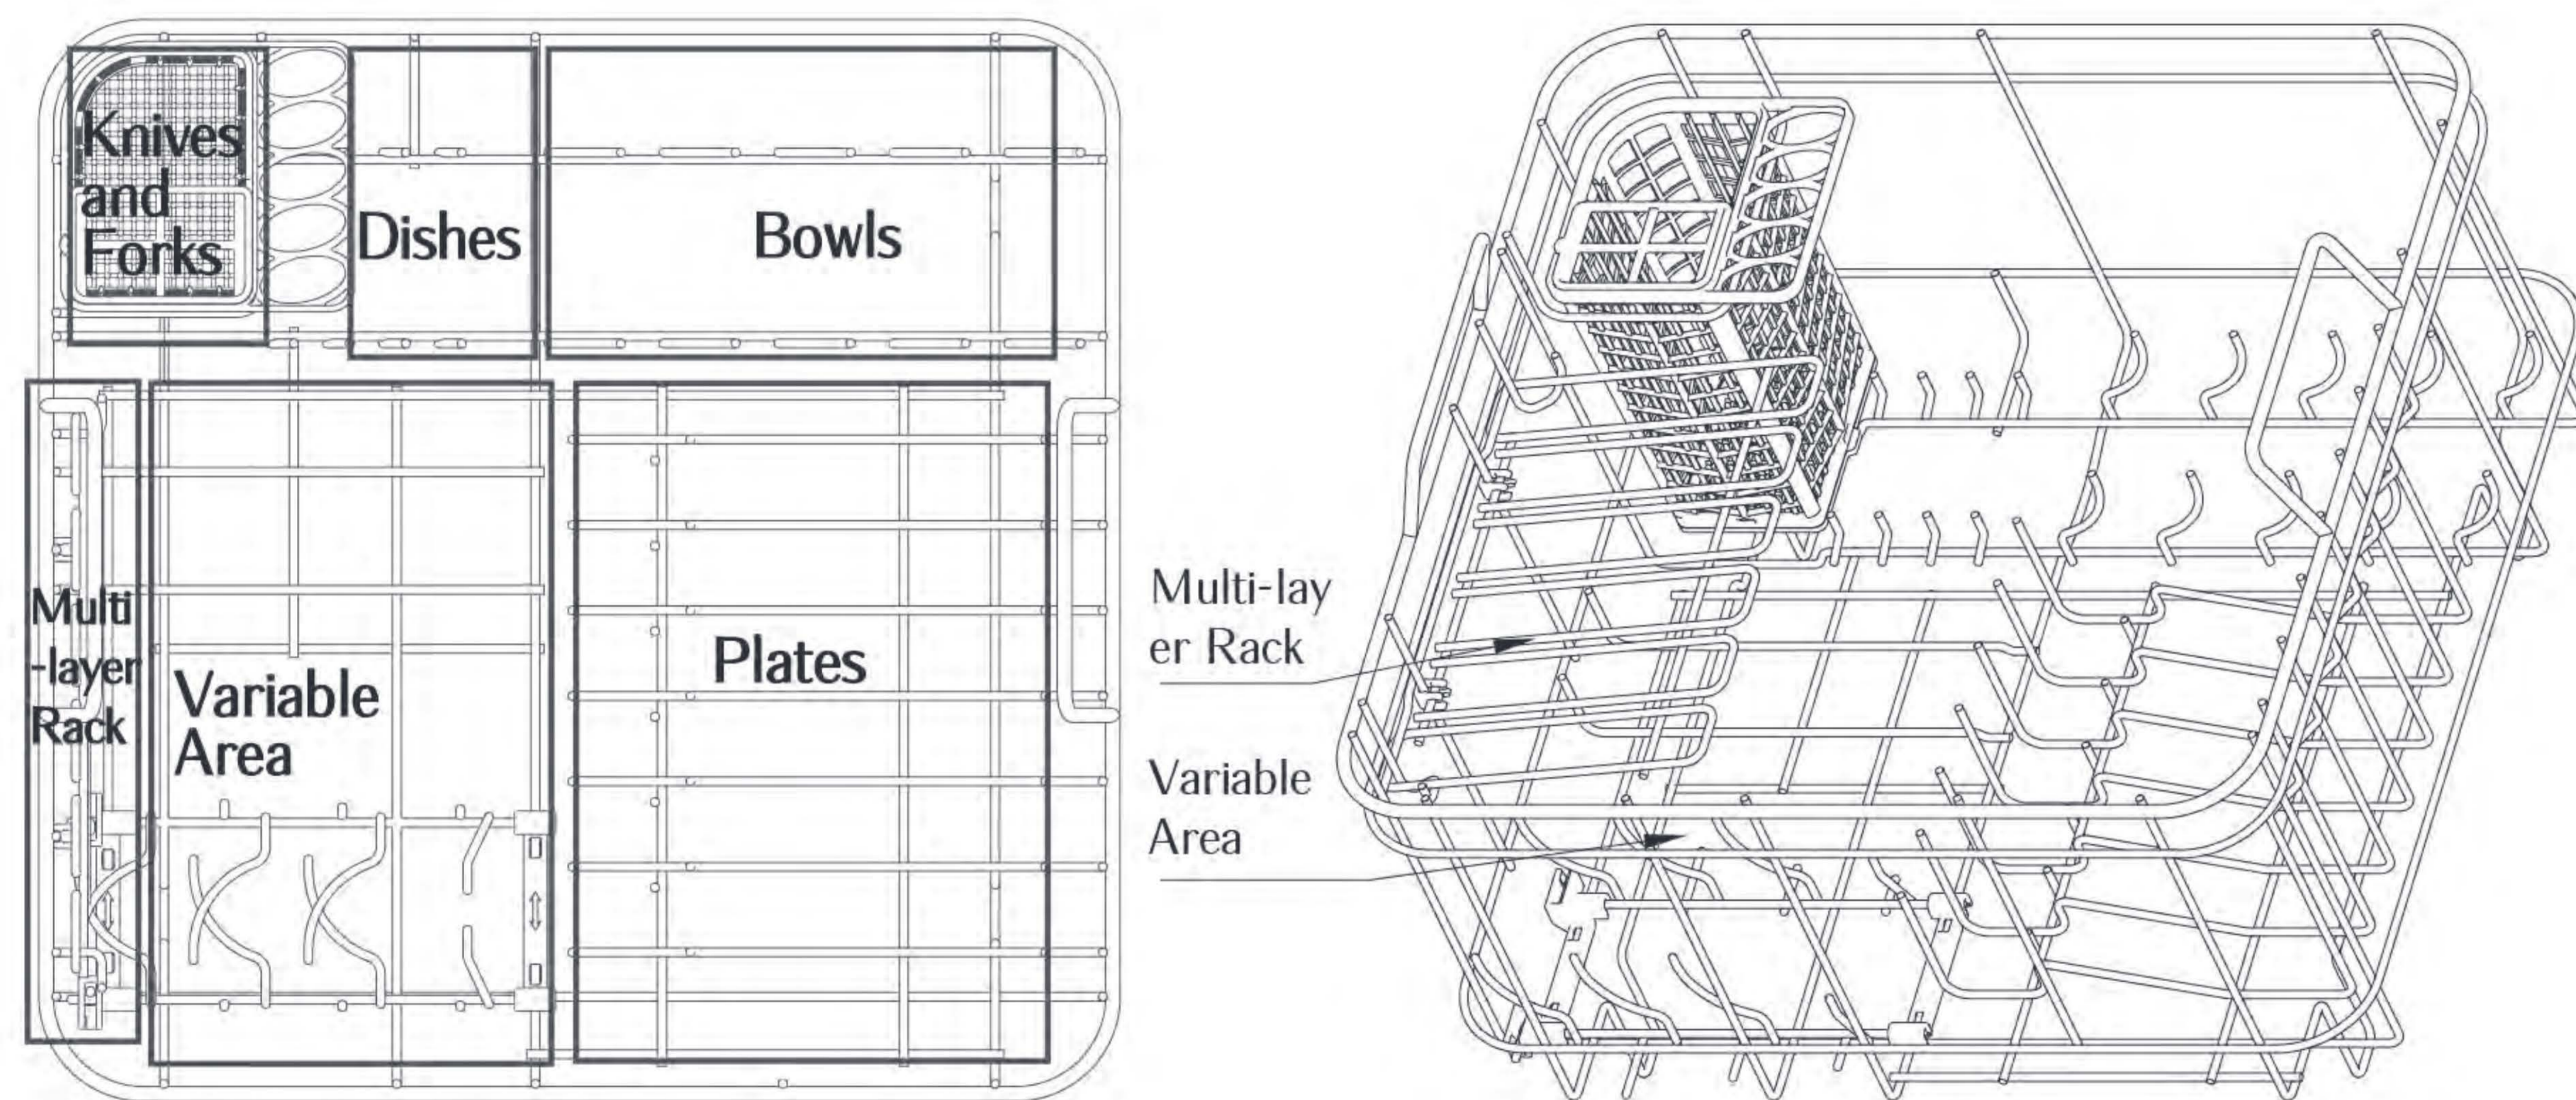

Please note:
To ensure effective washing,
please keep the dishes in the
same orientation as the
pointed arrow on the side of
the dishes washing basket.

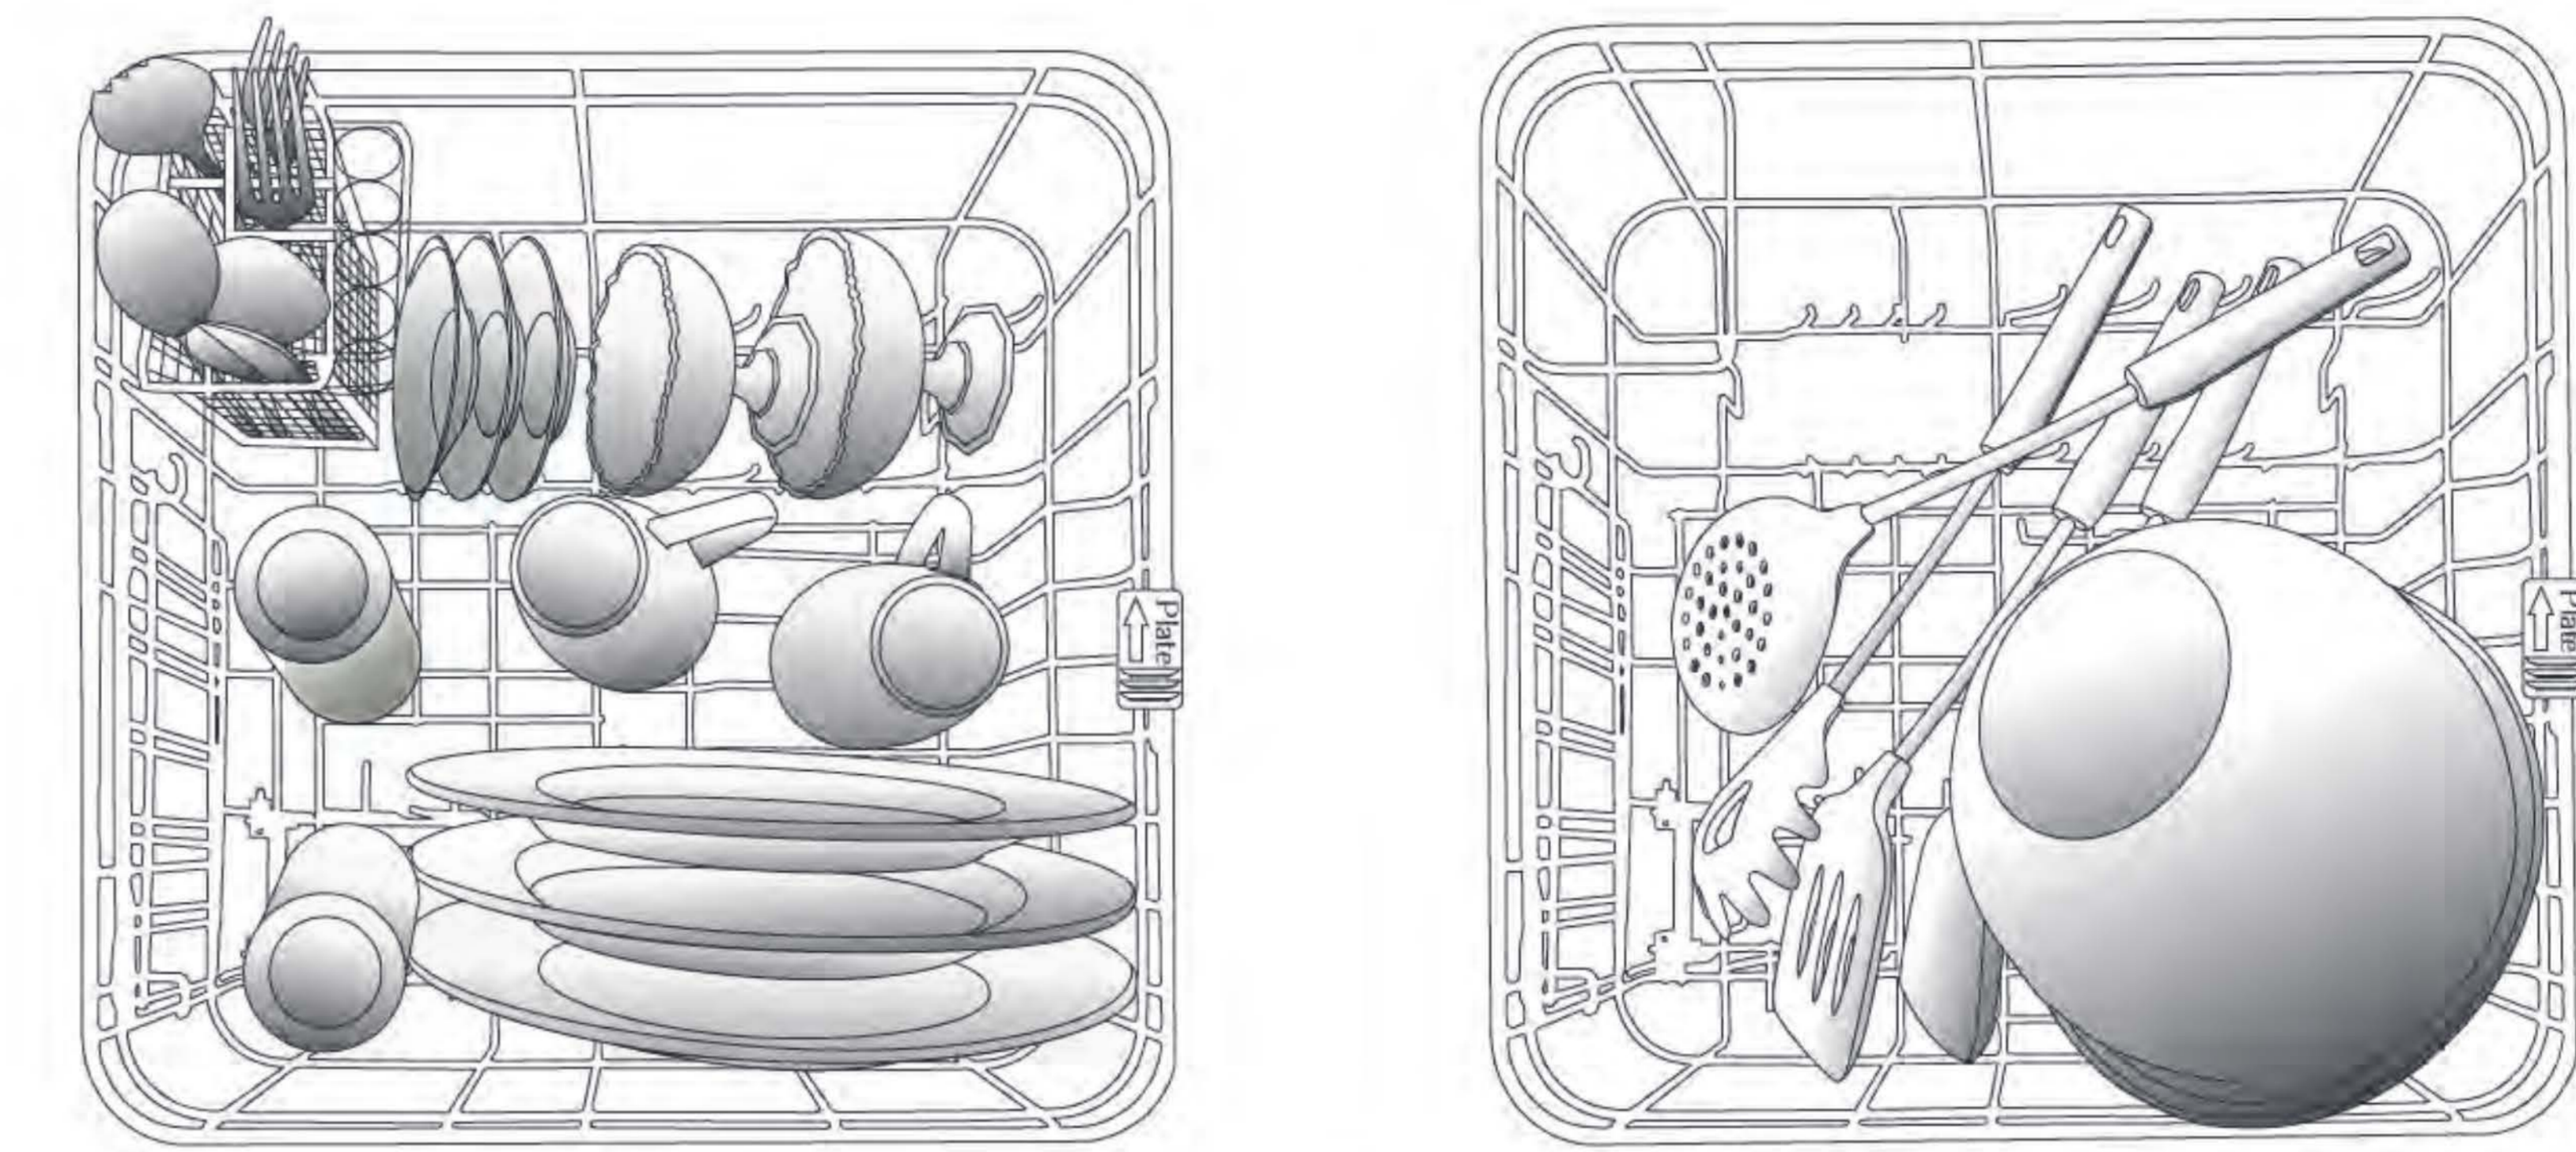

Schematic Diagram of Tableware Placement

Instructions for Tableware Placement:

1. Do not allow fragile items such as wine glasses to touch other tableware.
2. Avoid overlapping when loading tableware to ensure a good cleaning effect.
3. For fewer dishes, load tableware in intervals to improve the cleaning effect.
4. For tableware placement, please ensure that spoon handles and other tableware do not go beyond the bottom of the dish rack, which can interfere with the rotary spray arm.
5. When closing the door, please ensure that tableware, such as knives, forks, and spoons do not lean against the door. This will avoid damage to the dishwasher door.

Washable Tableware/Material



Tableware and Material	Washable or not	Tableware and Materials	Washable or not
Aluminum	Yes	Stainless Steel	Yes
Disposable Aluminum	No. The materials will break off and adhere to other dinnerware.	Pure Silver	Yes
Bottle and Can	No. The label is adhesive. It may block the spray arm and affect washing results.	Tin	No. It may erode and rust.
Cast Iron	No. It may rust.	Wooden Ivory	No. Unprocessed wood may distort and crack.
Ceramics	Yes	Knife with Hollow Handle	No. Adhesive from the knife may loosen and fall off due to the hot water under the heat of hot water.
Crystal	Yes	Copper and Bronze	No. It may distort and discolor due to hot water and detergent.
Aurum	No. It may discolor.		
Glass	No. It may discolor.		
Disposable Plastics	No. It cannot withstand hot water and detergent.		
High Temperature Plastics	Yes		

Note: For other special materials, please consult the FOTILE Customer Service Center.

Daily Cleaning

1. Open the door to gently clean any residual dirt left on the door.
2. Clean the walls and all the corners of the sink.
3. Remove the residue basket by turning it counterclockwise, pour out the residue and wash it.
4. Turn the rotary spray arm counterclockwise to remove and clean it.
5. Remove the filter screen and clean it.
6. Clean the bottom of the sink.
7. After cleaning, install the components to their original positions and make sure they are properly installed.

Remove and wash the debris basket:
Remove the debris basket counterclockwise, pour out the residue and wash it.

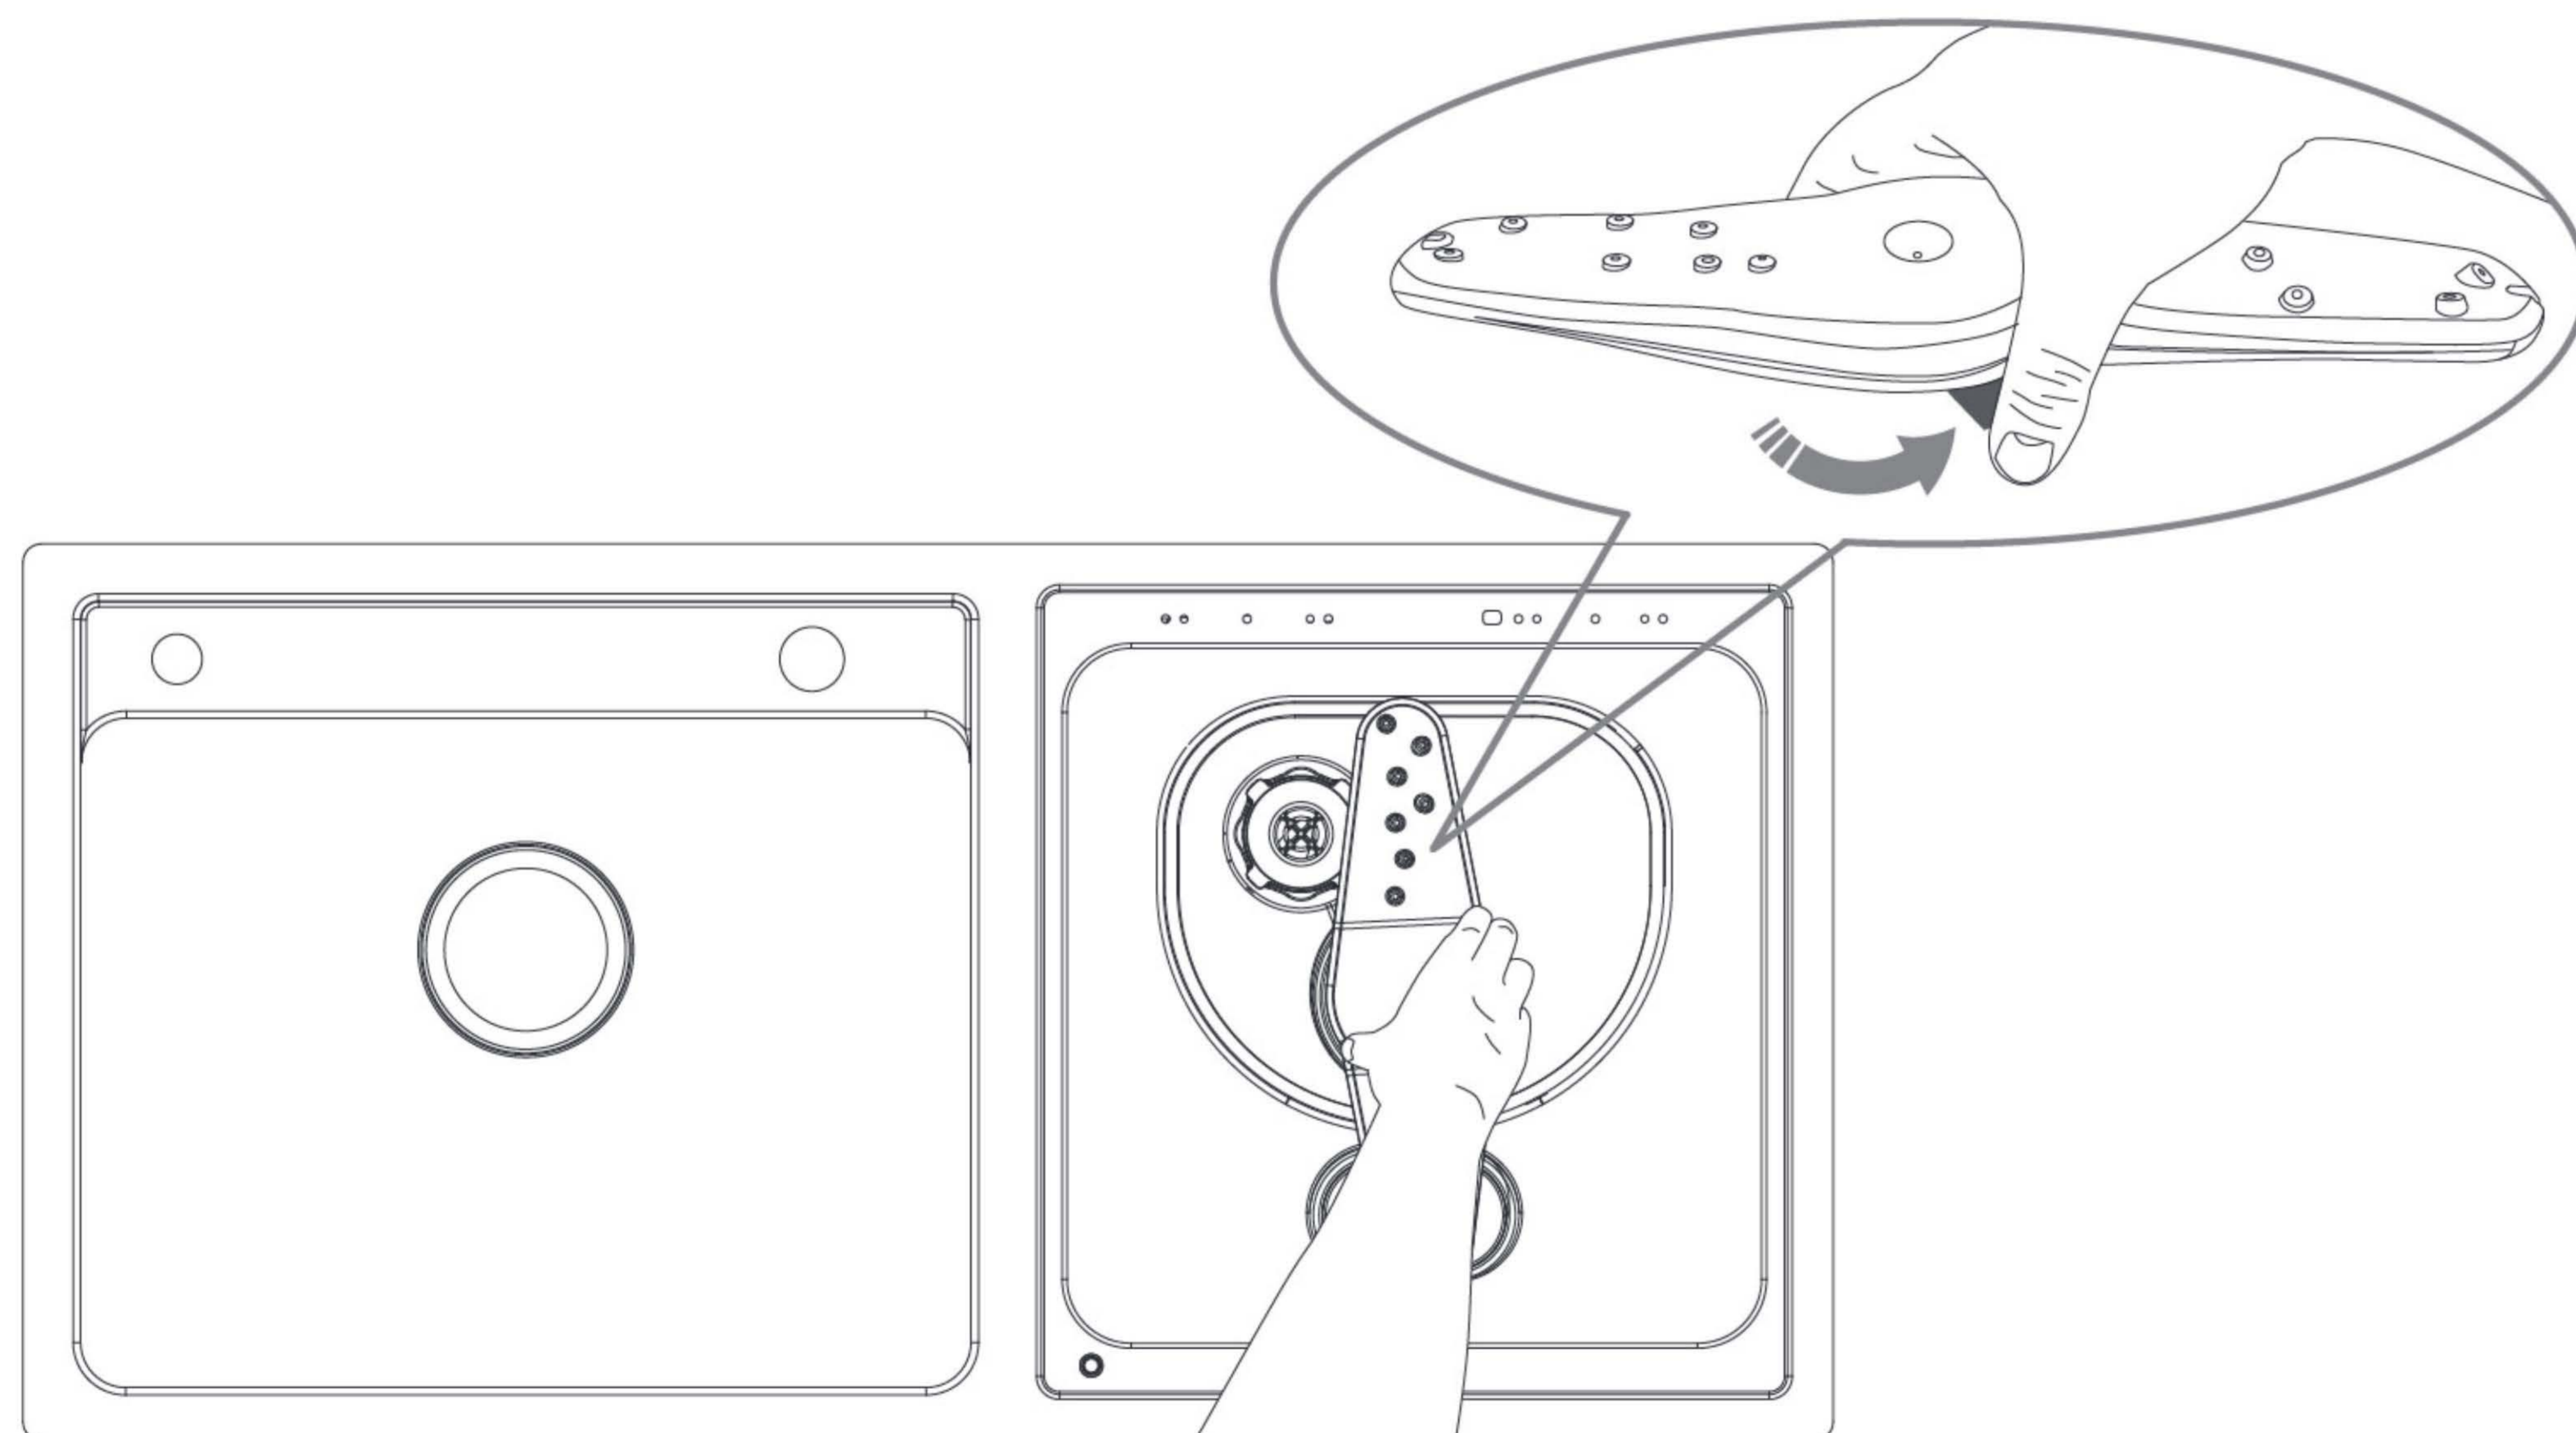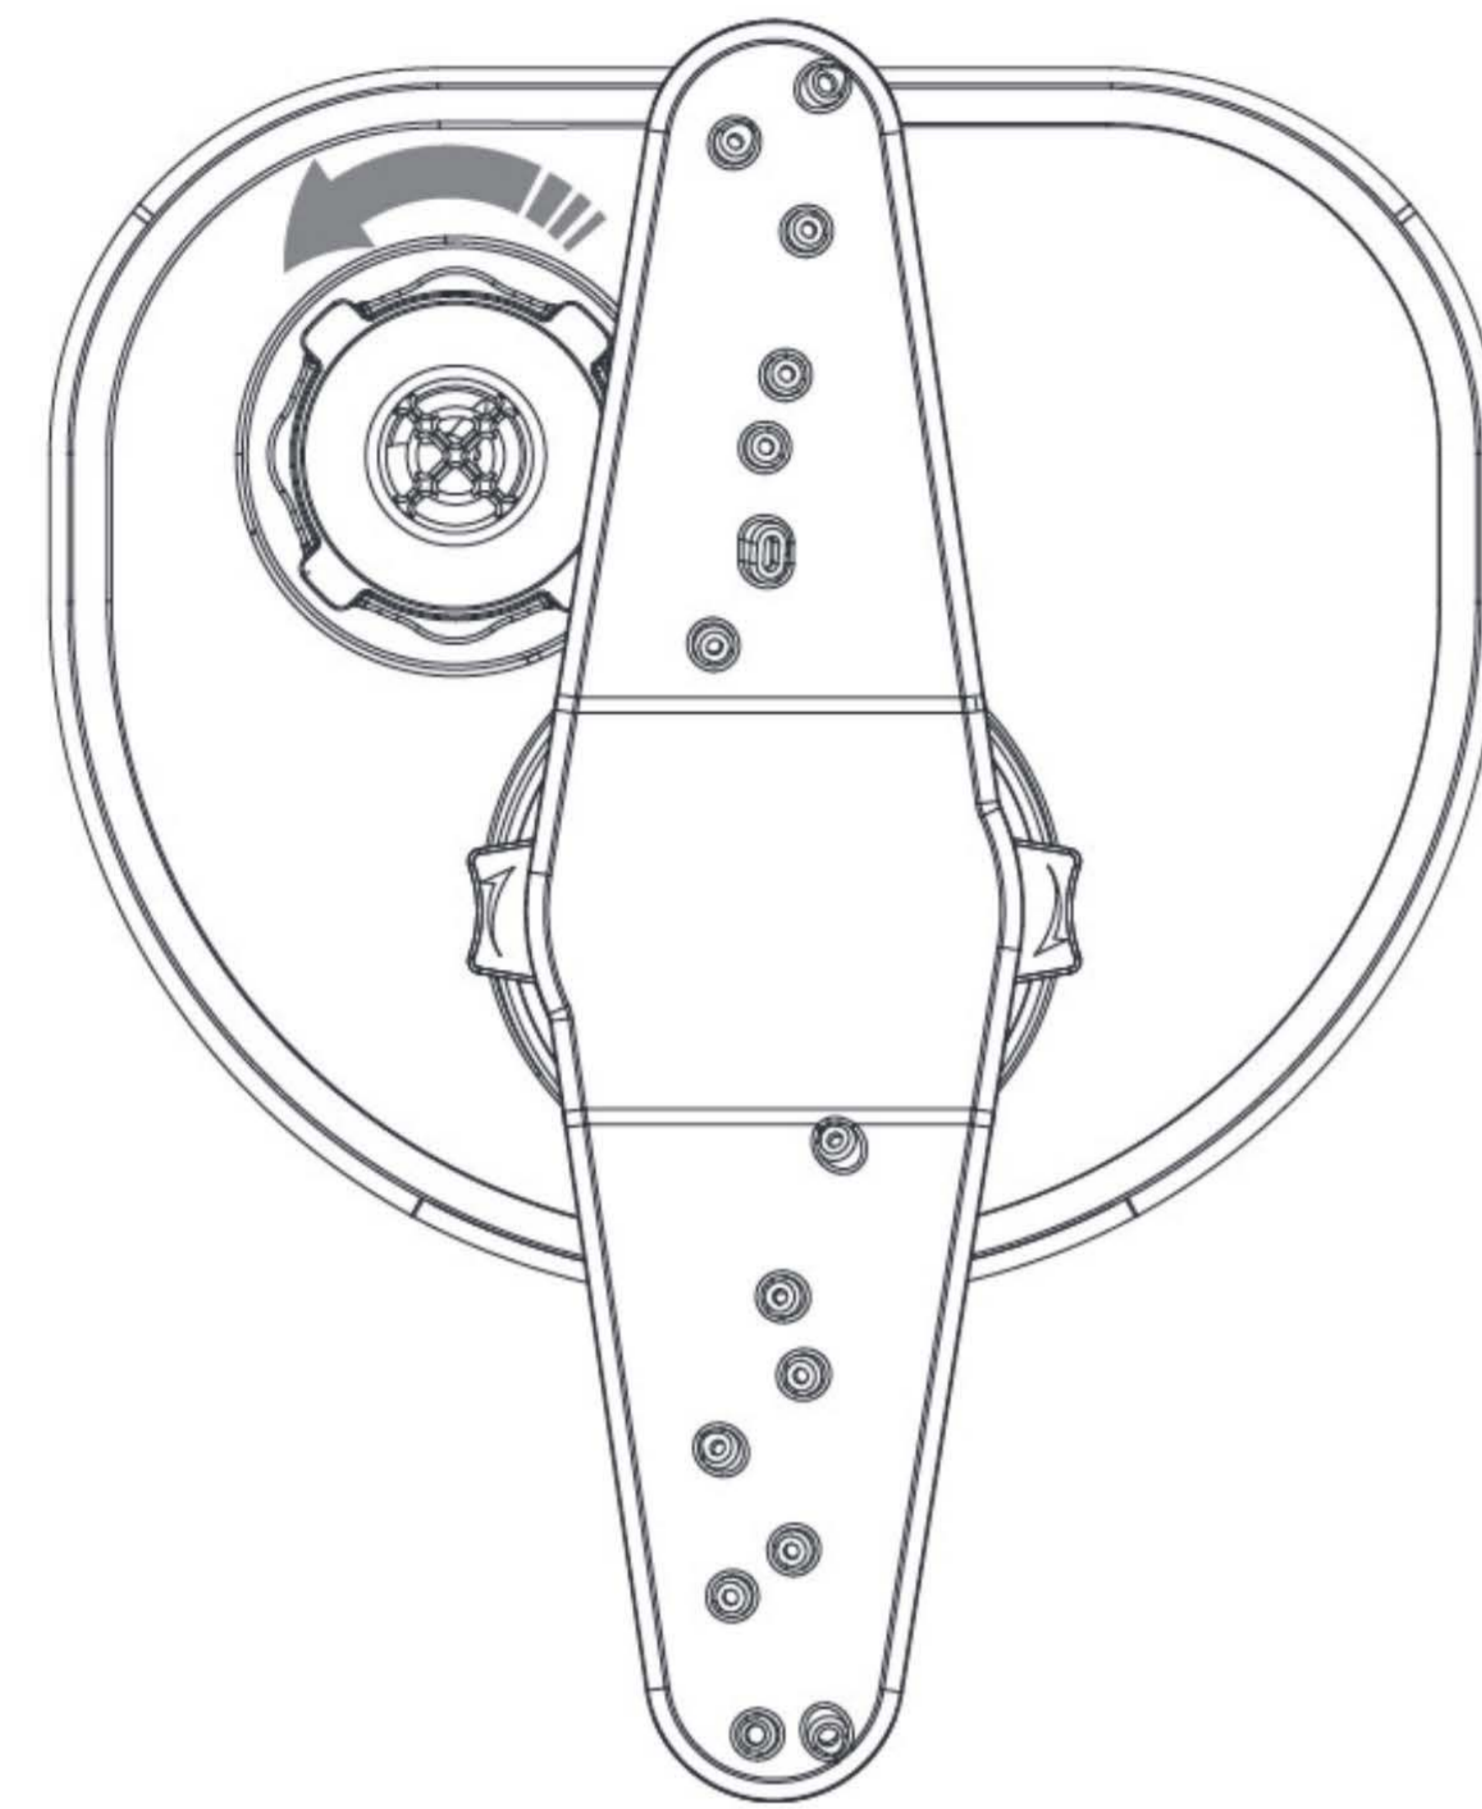

Remove and wash the spray arm:
Pinch the two gray raised snaps under the spray arm, press and rotate them counterclockwise to remove the spray arm for cleaning.

Install the spray arm:
Pinch the two gray raised snaps under the spray arm, press and rotate them clockwise. After hearing a "click" sound and if the spray arm rotates smoothly without any abnormal sound, the installation is considered to be complete.

Maintenance Recommendations

1. Do not use detergent to clean the sealing strip. The sealing strip may have holes or cracks as time elapses. If there are any holes or cracks, please change the sealing strip with a new one.
2. Cleaning the tempered glass panel of the door
Wash by hand using hot water and a small amount of dishwashing liquid and a soft sponge. Dry it with a soft cloth after cleaning.
Do not use scouring pads, metal scourers or similar materials to rub against the glass surface.
3. Cleaning of the stainless-steel sink:

Daily Maintenance Techniques for the 304 Stainless Steel Sink

The sink dishwasher is made of 304 stainless steel. Please protect the sink from scratches!

1. If you are in the process of decoration, you may apply a layer of oil on the surface of the sink to prevent metal fragments from rusting. In addition, if you will not be using the sink dishwasher for a long time, please apply a layer of oil on the sink to protect it.
2. Wash the sink frequently with a neutral detergent and clean it thoroughly and gently with clean water.
Do not use steel brushes or coarse brushes. After cleaning, please dry it with a sponge or rag.
3. Do not put food with high salt content or erosive foods, such as lemons, sauce, pickles and mustard in the sink or on the panel for a long time to avoid erosion of the sink.
4. Try to keep the sink from contacting strong bleaching powder, household chemicals and soaps for a long time.
5. Try to keep sharp and hard utensils such as knives, forks and other kitchenware away from the sink to avoid scraping, scratching or denting the sink.
6. Do not put kitchenware made of low carbon steel or cast iron in the sink for a long time or leave steel wool, rubber dishwashing tablets, wet dishwashing sponges and other cleaning pads in the sink to prevent rust, mildew, etc., from forming overtime.
7. If the sink has rust, mildew, etc., please apply household toothpaste on the rust stain and spots and then wipe it off with a rag. Do not clean the sink with wire wool, polishing wheels or polishing materials.

4. The spray arm and the debris basket can be removed and washed by turning them counterclockwise to remove.
5. After washing, do not leave water on the control panel or it may affect normal usage.
6. After each washing session, please clean out the food debris in the debris basket immediately, or it may affect the machine's washing capability, and may also cause an unpleasant smell.
7. In case incrustation is formed in the functional sink (whitening of the surfaces of sink, heating plate, dish rack, etc.), please clean the sink with vinegar and soda ash / carbonate.
8. Self-cleaning of the sink is recommended at regular intervals or when reused after a long period of not being used.

Troubleshooting

If you find anything abnormal during the usage, please stop using the machine, pull out the power plug, and check following items:

Fault	Possible Cause	Repair Method
Abnormal sound	The spray arm is not installed properly.	Remove and reinstall the spray arm.
	Tableware is not placed as specified, causing collision	Check if the tableware is placed in accordance with the standard requirements.
The display screen fails to launch and the key does not respond.	The power source is not connected.	Check if the power plug is plugged in.
Smelly	Lack of Cleaning	Please maintain the product according to the daily cleaning steps.
Secondary Sink cannot drain	Accidentally touching the Mode key causing the drain valve to close.	In the shutdown state, please press and hold the Level key for 2 seconds to open the drain valve.
Door cannot open	The power is cut off when the dishwasher is in use.	Open the lower cabinet, find the white door string, and gently pry the door armrest with a straight screwdriver at the same time of pulling down the string.
Display Code E1	Door opened	Gently press the door downward.
	Door lock fault	Please consult FOTILE customer service.
Display Code E2	Low water pressure	Ensure the inlet valve is fully open.
		Please consult FOTILE customer service.
Display Code E8	Water leakage, or the door is not tightly sealed.	Ensure the inlet valve is fully open.
		Please consult FOTILE customer service.
Other Display Codes	/	Please consult FOTILE customer service.

Customer Service

All FOTILE dishwasher products enjoy five-year limited warranty, including 1 Yr full warranty on Parts and Labor, and 4 Yr limited warranty on the dishwasher motor only.

The following circumstances do not fall into the scope of warranty:

- Free door-to-door service, confirming installation conditions, or guiding how to use the product, etc.
- Improper transportation, installation or maintenance conducted by user voluntarily.
- Product failure caused by abuse, misuse, modification, or use for other purposes or commercial purposes.
- Damage caused by cleaning and maintenance not in accordance with the instructions.
- Product damage caused by accident, fire, flood, force majeure, etc.
- Failure and damage caused by using the product beyond the normal operating conditions, e.g. the voltage is too high.
- Discrepancy between the information on the purchase voucher and the warranty registration information of the product.

This warranty covers original purchasers and any subsequent owners purchased the product in US.


If the product is located in a place where authorized service of FOTILE cannot reach, you shall be responsible for paying the corresponding transportation expenses, or you shall need to take the product to the authorized service office for maintenance.

- If you have purchased FOTILE sink dishwasher product, please register as soon as possible, so we can communicate with you and provide our services when you need them. You can register your product using two methods:
 - Fill out the paper product registration card attached in the product package

and mail it to FOTILE.

- Log into the FOTILE Website for product registration: <https://www.fotileglobal.com/us/ProductRegistration.html>
- If you have purchased the FOTILE sink dishwasher product, please inform us of the product model and serial number when communicating, which can help us serve you better.


You can find the information at position A in the diagram:

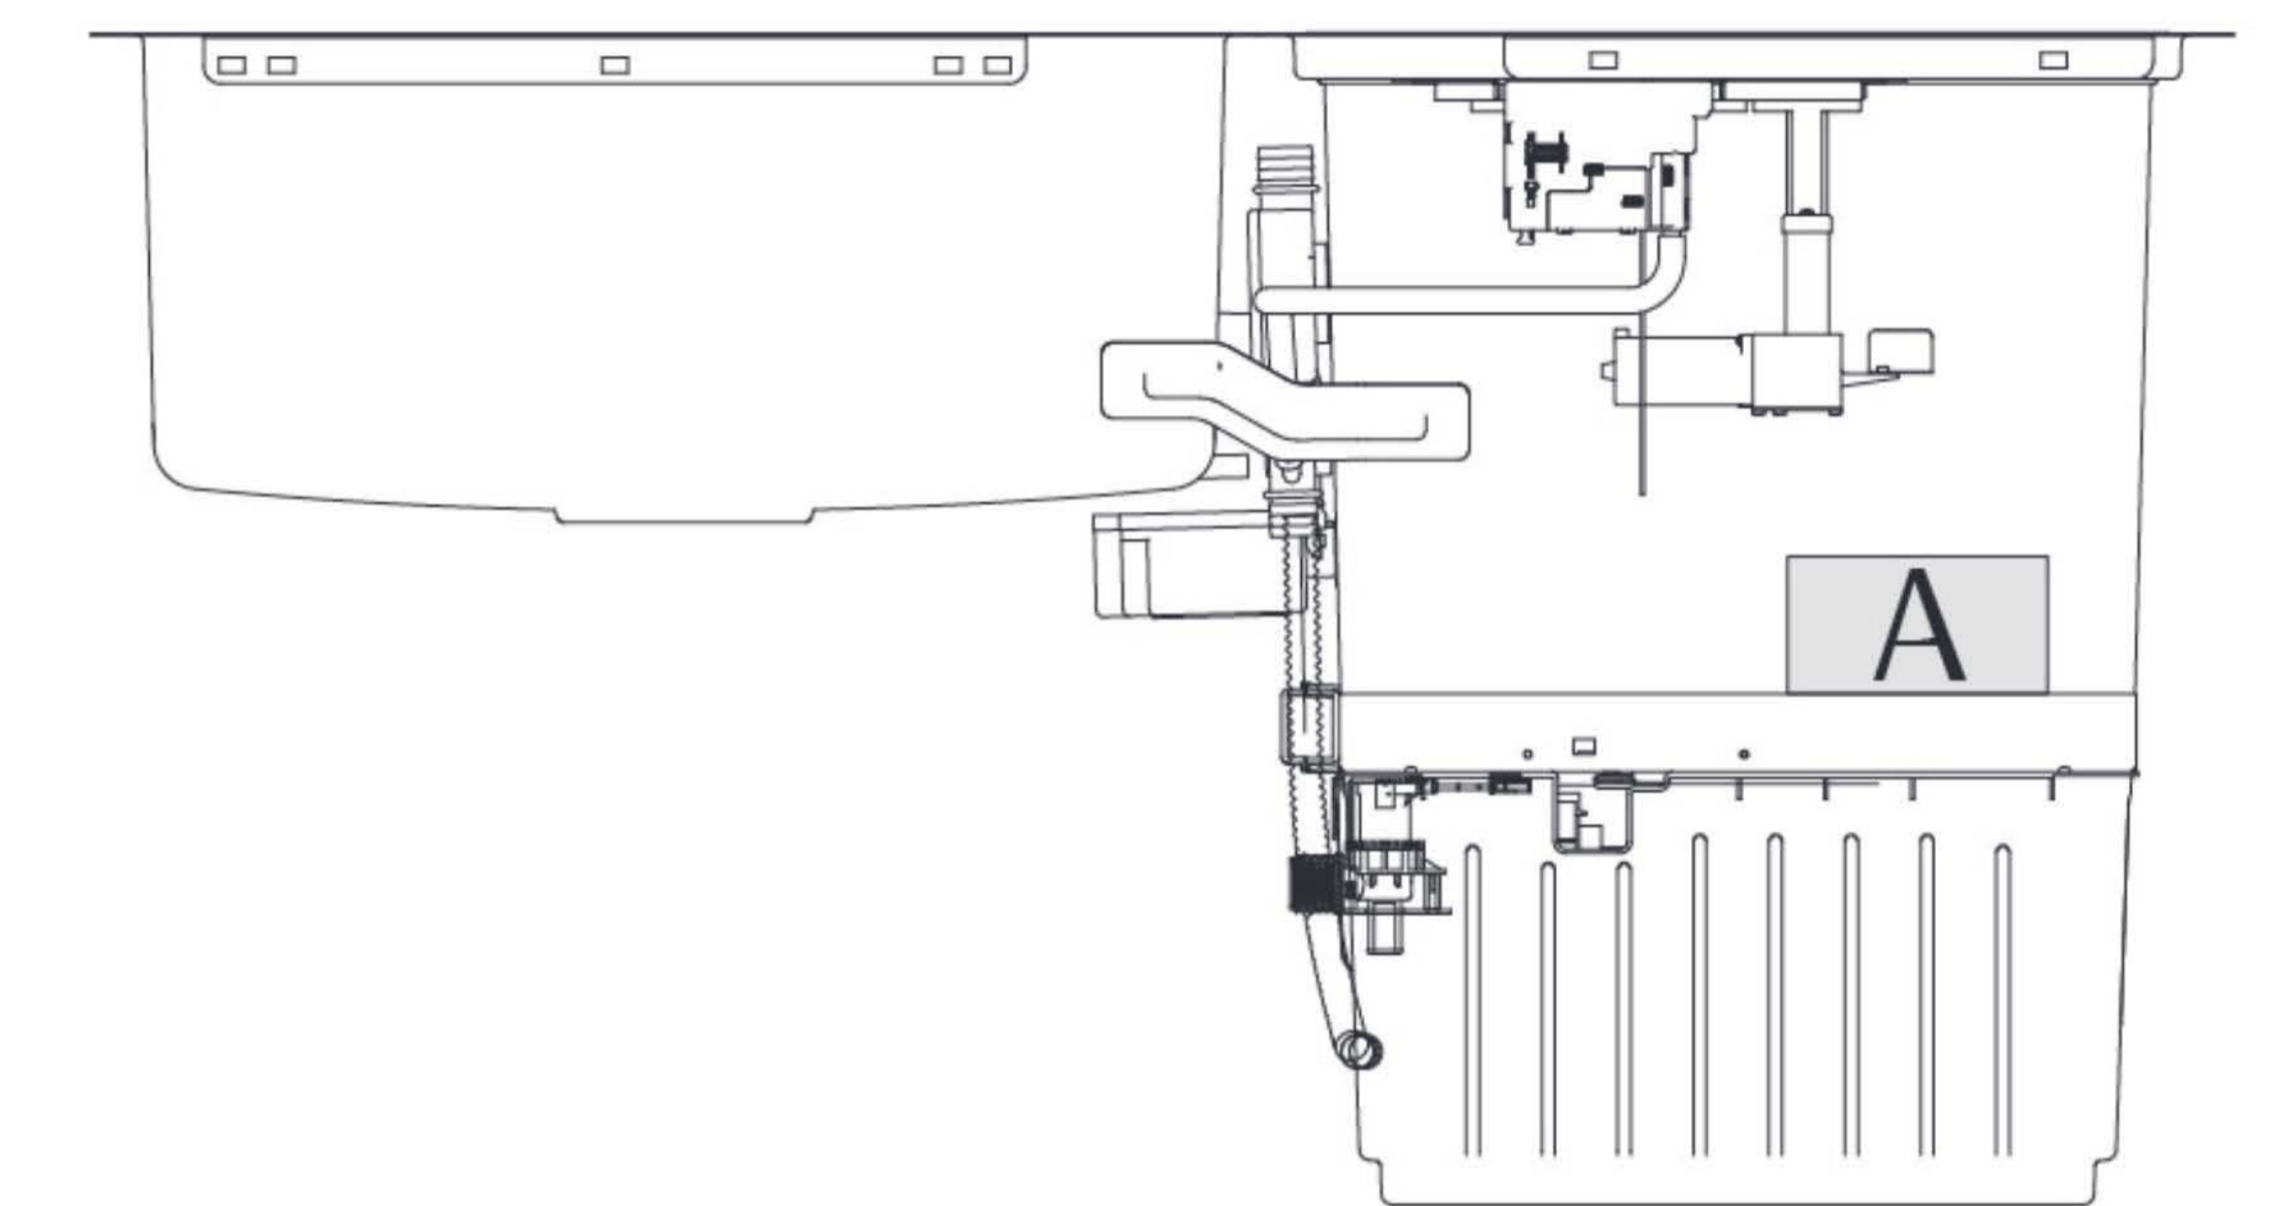

- If you need to buy accessories, you can go for one of the following selections:
 - Visit the official mall of FOTILE: <https://shop.fotile-global.com/>, to understand and purchase our product.
 - Call the FOTILE Customer Service Center 1(888)-315-0366, for consultation and purchase.
 - Contact the official authorized store of FOTILE (you can inquire the authorized store in your city by visiting the official website of FOTILE, <https://www.FOTILEglobal.com/us/>, for consultation and purchase.
- If you need other services, please feel free to contact FOTILE by the following ways:
 - Toll Free: 1(888)315-0366
 - Customer service email: serviceusa@FOTILE.com (Please leave a phone number for daytime contact)
 - Mailing address: 6 Campus Dr, Suite 210, Parsippany, NJ 07054


Exploded View

SD2F-P1X

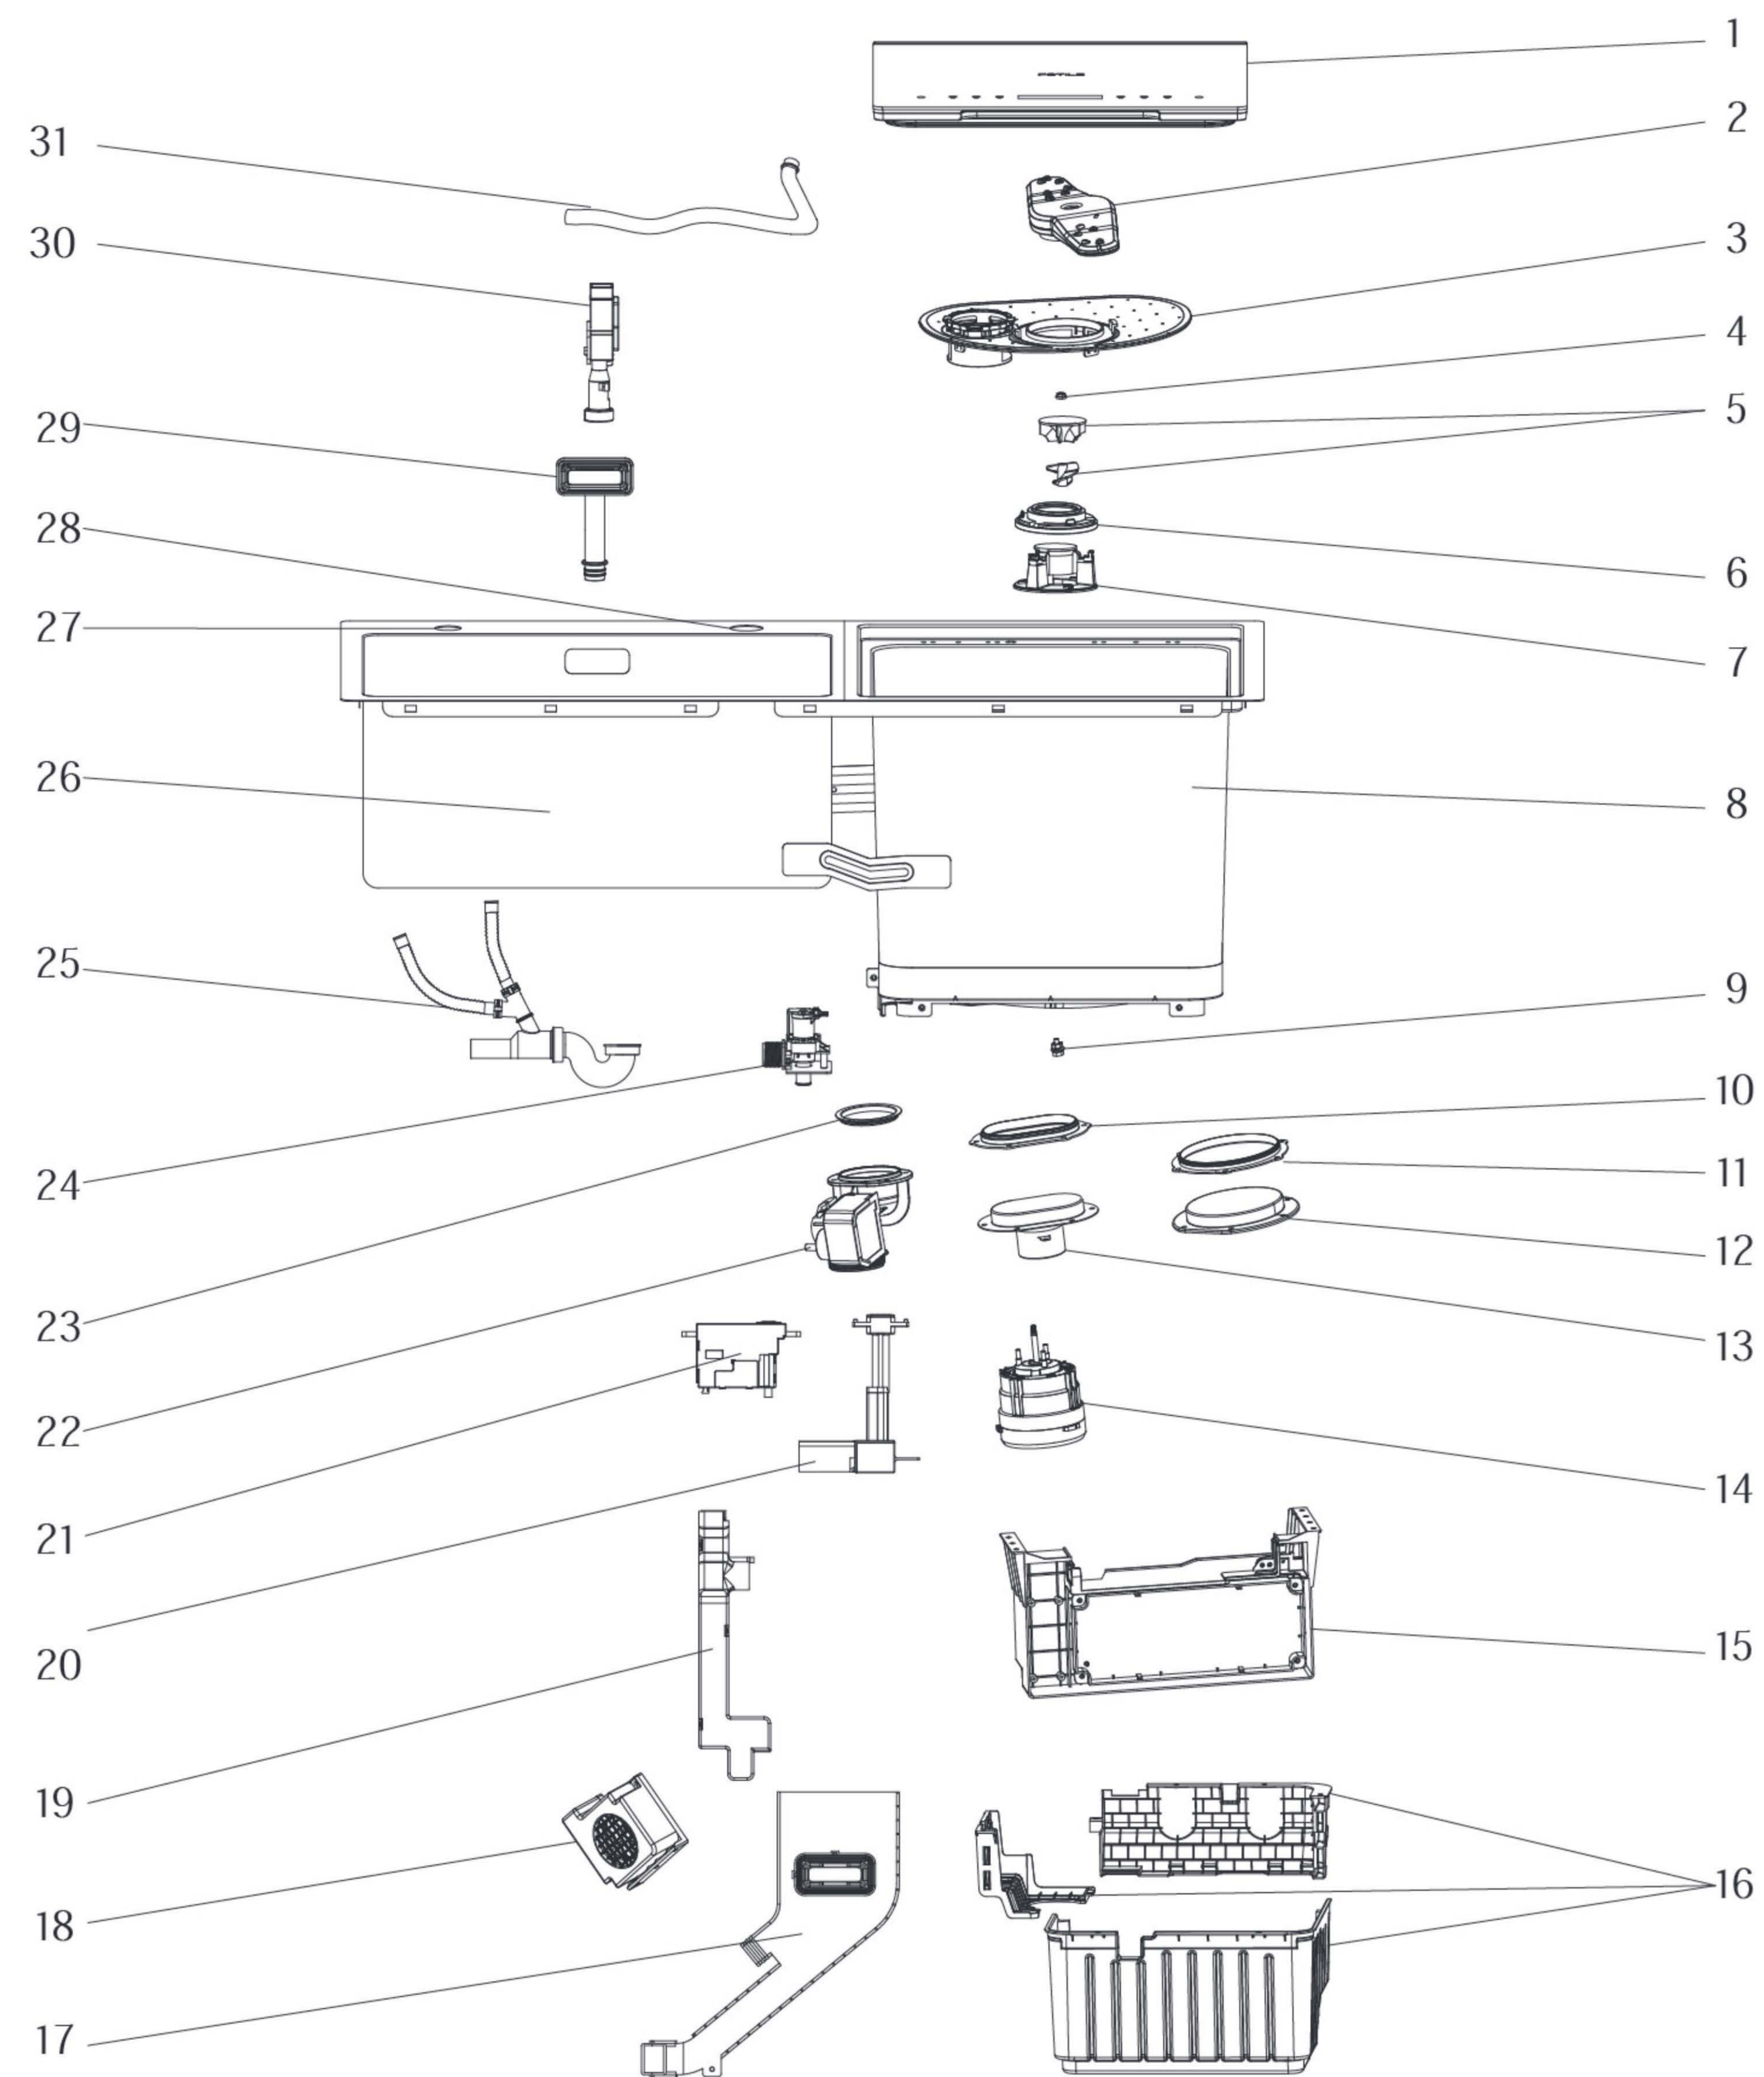

- 1. Door
- 2. Spray arm
- 3. Filtering screen
- 4. Vane locknut
- 5. Impeller (upper and lower)
- 6. Motor cover
- 7. Diversion base
- 8. Functional sink
- 9. Temperature sensor
- 10. Sealing gasket for ultrasound transducer
- 11. Sealing gasket for heating plate
- 12. Heating plate
- 13. Ultrasound transducer
- 14. Motor
- 15. Electrical box
- 16. Bottom cover
- 17. Assembly of air intake seat
- 18. Fan assembly
- 19. Cable bracket
- 20. Door motor
- 21. Door lock
- 22. Drain valve
- 23. Seal ring of drain valve
- 24. Inlet valve
- 25. Sewer adapter hose assembly for functional sink
- 26. Sink
- 27. Installation hole of soap dispenser
- 28. Faucet mounting hole
- 29. Overflow port for the sink
- 30. Overflow port for functional sink
- 31. Power cable

SD2F-P1XL

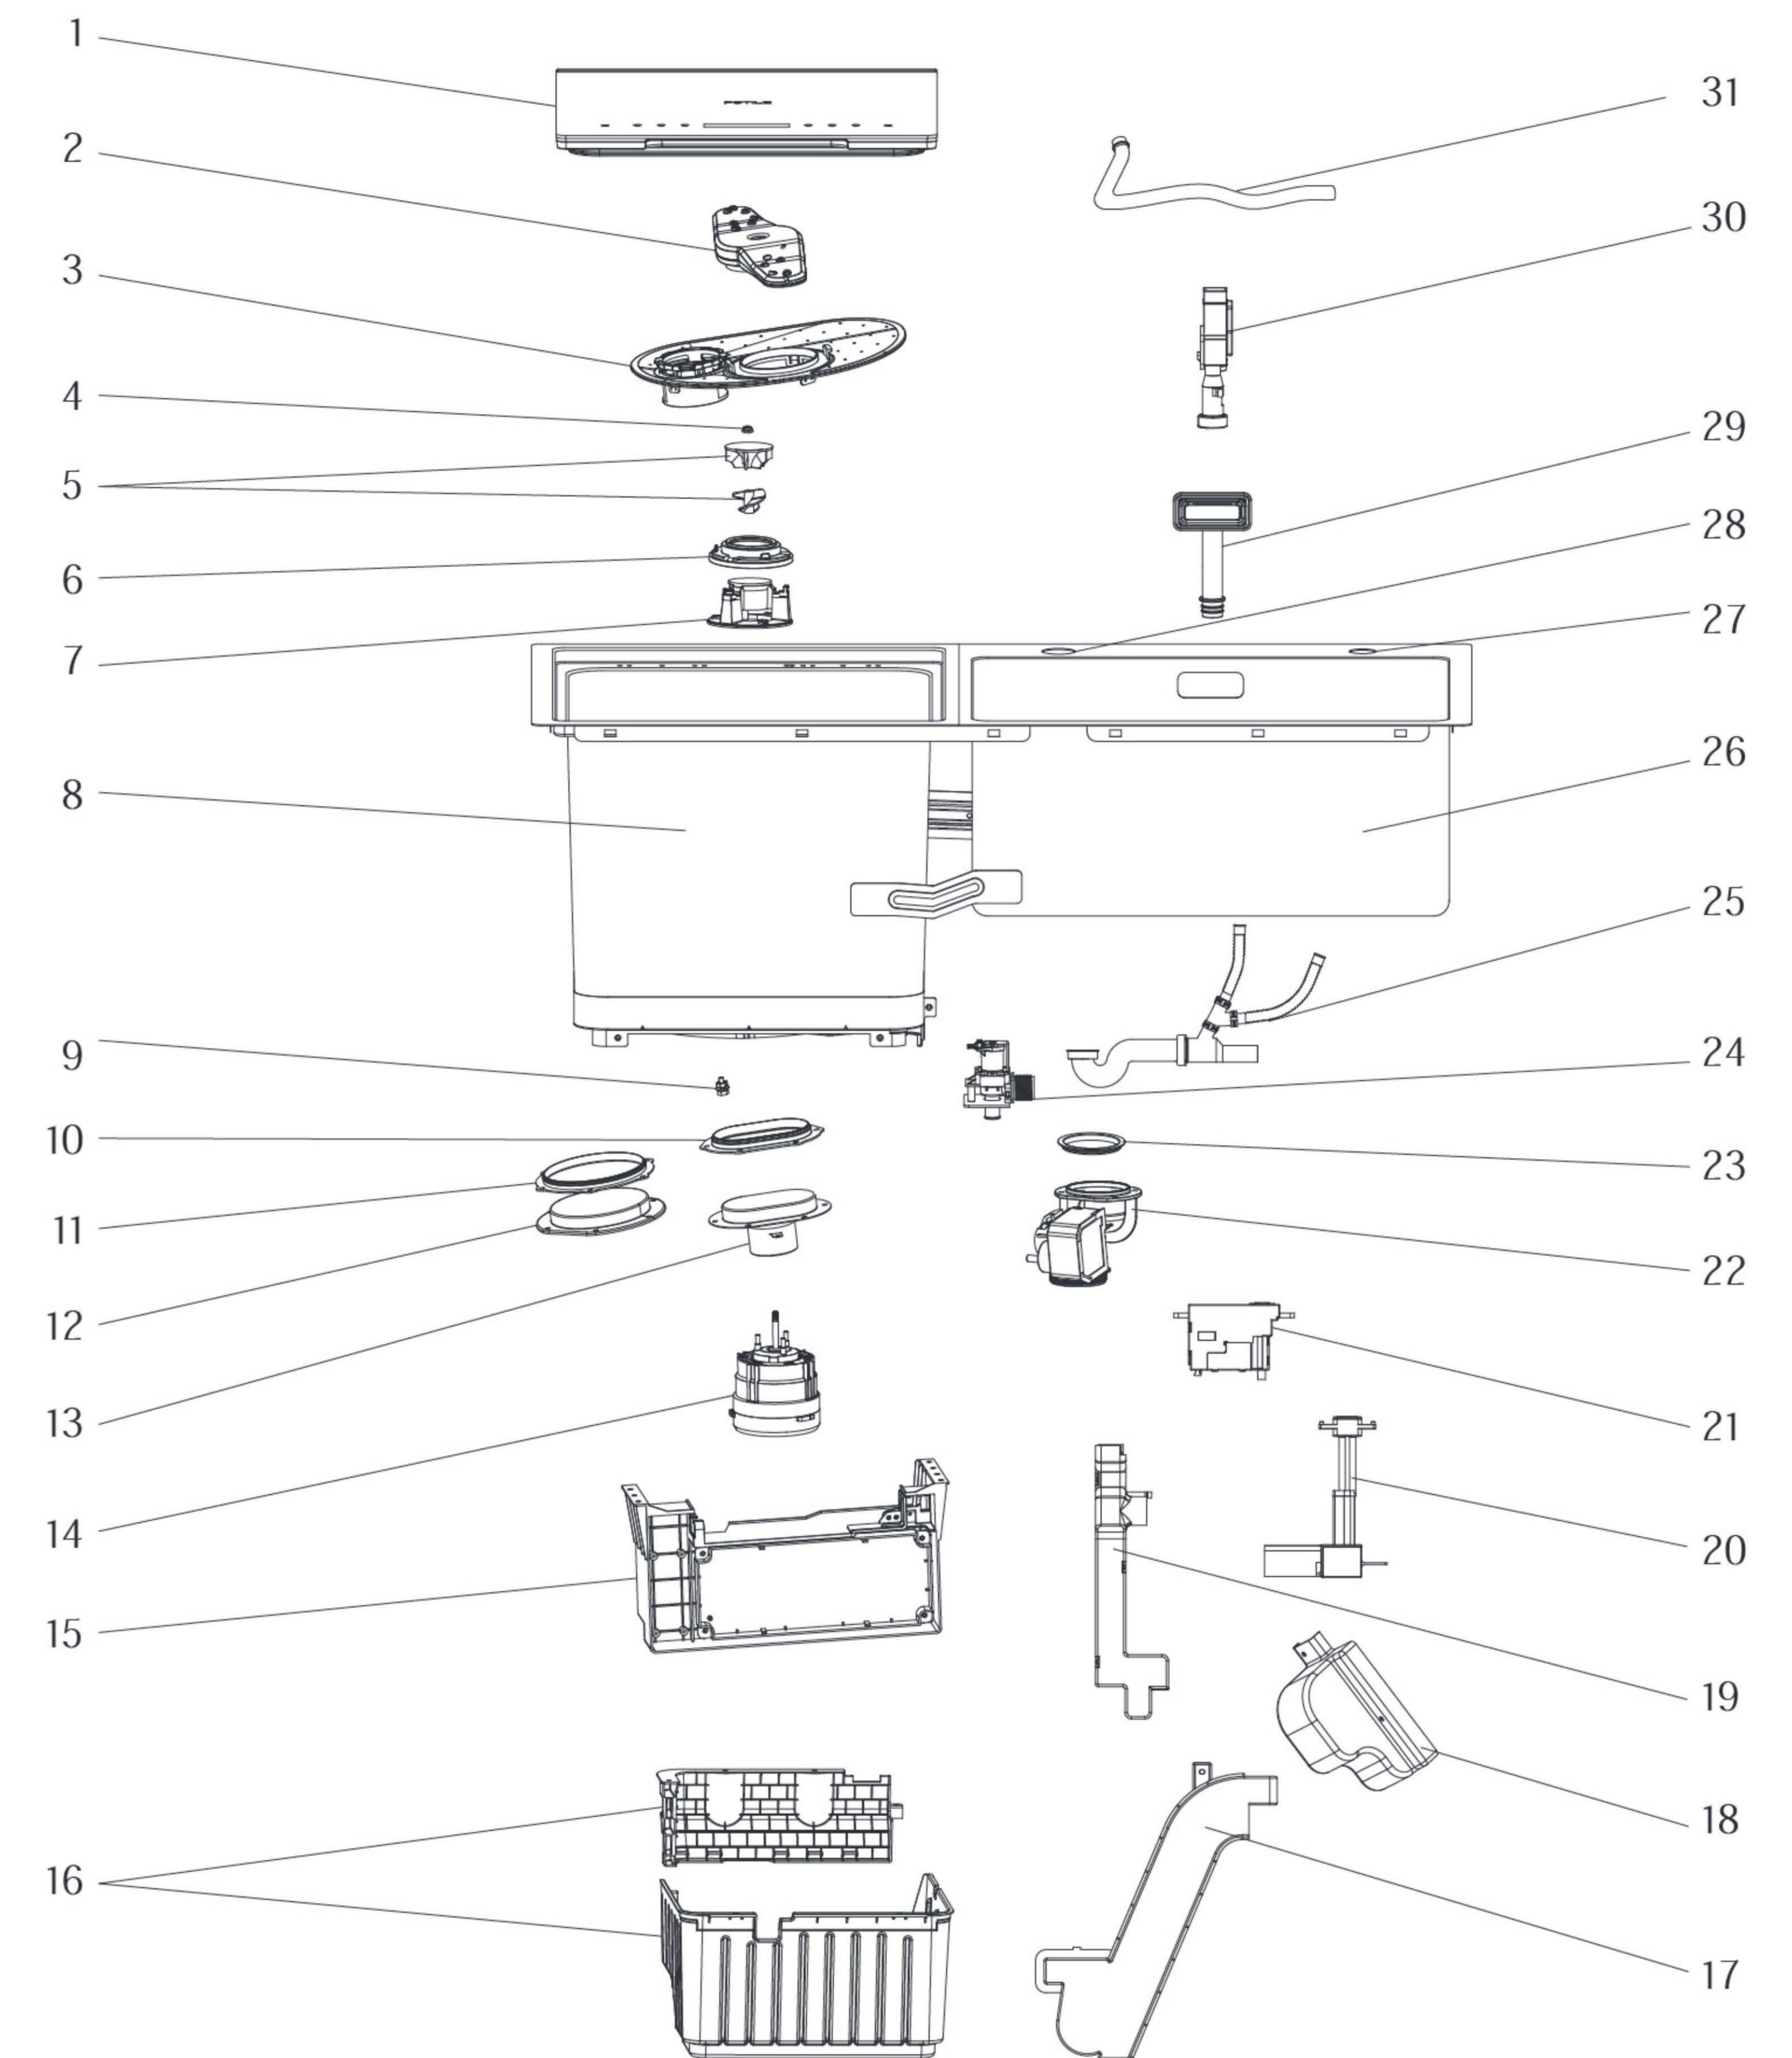

- 1. Door
- 2. Spray arm
- 3. Filtering screen
- 4. Vane locknut
- 5. Impeller (upper and lower)
- 6. Motor cover
- 7. Diversion base
- 8. Functional sink
- 9. Temperature sensor
- 10. Sealing gasket for ultrasound transducer
- 11. Sealing gasket for heating plate
- 12. Heating plate
- 13. Ultrasound transducer
- 14. Motor
- 15. Electrical box
- 16. Bottom cover
- 17. Assembly of air intake seat
- 18. Fan assembly
- 19. Cable bracket
- 20. Door motor
- 21. Door lock
- 22. Drain valve
- 23. Seal ring of drain valve
- 24. Inlet valve
- 25. Sewer adapter hose assembly for functional sink
- 26. Sink
- 27. Installation hole of soap dispenser
- 28. Faucet mounting hole
- 29. Overflow port for the sink
- 30. Overflow port for functional sink
- 31. Power cable